

**Torque Switch  
MODEL GA4567EPC  
and  
MODEL GA4568EPB  
Pulse Width Modulated  
Servo Amplifiers**

**OPERATION and  
SERVICE MANUAL for  
MODEL GA4567EPC  
and  
MODEL GA4568EPB**



**GA4567EPC AND GA4568EPB MANUAL**

**4567-8140 Rev. (-) 28 OCT. 93**

**OPERATION and SERVICE MANUAL**  
**FOR MODELS GA4567EPC and GA4568EPB**

**TABLE of CONTENTS**

	<b><u>PAGE</u></b>
<b>CHAPTER ONE: INTRODUCTION</b>	
1.1 INTRODUCTION to the GA4567EPC and GA4568EPB MANUAL .....	1
<b>CHAPTER TWO: DESCRIPTION and SPECIFICATIONS</b>	
2.1 DESCRIPTION of the GA4567EPC and GA4568EPB .....	2
2.2 MODEL NUMBERING INFORMATION and AVAILABLE OPTIONS .....	2-3
2.2.1 BASIC MODEL NUMBER .....	2
2.2.2 VELOCITY-MODE or CURRENT-MODE OPTIONS .....	2
2.2.3 VELOCITY-TAPER CURRENT-LIMIT OPTION (GA4568EPB ONLY) .....	2
2.2.4 "LOGIC" INPUTS .....	2
2.2.5 MODEL NUMBERING .....	2-3
2.3 PROTECTION CIRCUITS .....	4-5
2.3.1 FAULT INPUT/OUTPUT .....	4
2.3.2 HIGH-SPEED ELECTRONIC CIRCUIT BREAKER (RED LED) .....	4
2.3.3 LOW-SPEED ELECTRONIC CIRCUIT BREAKER (RED LED) .....	4
2.3.4 OVER-TEMP INDICATOR OPERATION (RED LED) .....	4
2.3.5 DC BUSS OVER-VOLTAGE MONITOR (RED LED) .....	4
2.3.6 RESETTING the FAULT LATCH .....	4
2.3.7 LOW-VOLTAGE POWER-SUPPLY MONITOR .....	4
2.3.8 VELOCITY-TAPER CURRENT-LIMIT (GA4568EPB ONLY) .....	5
2.4 SPECIFICATIONS .....	5-6
2.4.1 OUTPUT POWER .....	5



## GA4567EPC and GA4568EPB MANUAL

<b>CHAPTER TWO: DESCRIPTION and SPECIFICATIONS Con't</b>	<b>PAGE</b>
2.4.2 INPUT POWER .....	5
2.4.3 SIGNAL INPUTS .....	6
2.4.4 OTHER INPUTS and OUTPUTS .....	6
2.4.5 OTHER SPECIFICATIONS .....	6
2.4.6 MECHANICAL (ALSO SEE APPENDIX B3-B6) .....	6
2.4.7 TYPICAL FACTORY SETTINGS .....	6
<b>CHAPTER THREE: PERSONALITY PREAMP CARD</b>	
3.1 INTRODUCTION to the PERSONALITY PREAMP CARD .....	7
3.1.1 VELOCITY-MODE PERSONALITY PREAMP CARD .....	7
3.1.2 CURRENT-MODE PERSONALITY PREAMP CARD .....	7
3.2 DESCRIPTION of OPTIONS and ADJUSTMENTS .....	7-8
3.2.1 POTENTIOMETER ADJUSTMENTS .....	7-8
3.2.2 INPUT and OUTPUT SIGNALS .....	8
3.3 REMOVAL and INSTALLATION .....	9
3.4 TROUBLE SHOOTING with the PERSONALITY PREAMP CARD .....	9
<b>CHAPTER FOUR: THEORY of OPERATION</b>	
4.1 INTRODUCTION to THEORY of OPERATION .....	10
4.2 OPERATION of OUTPUT SWITCHING TRANSISTORS .....	10
4.3 "H TYPE" OUTPUT BRIDGE CONFIGURATION .....	10-11
4.4 <u>PULSE-WIDTH-MODULATION (PWM)</u> .....	11-12
4.5 CURRENT-LOOP OPERATION .....	13
4.6 VELOCITY-LOOP OPERATION .....	13
<b>CHAPTER FIVE: INSTALLATION PROCEDURE</b>	
5.1 MOUNTING .....	14
5.2 WIRING SIZE and PROPER TECHNIQUE .....	14-15



<b>CHAPTER FIVE: INSTALLATION PROCEDURE Con't</b>	<b>PAGE</b>
5.3 BASEPLATE CONNECTIONS .....	15
5.3.1 120 VAC 50/60 Hz FOR FAN(S) .....	15
5.3.2 INPUT from SECONDARY of POWER TRANSFORMER .....	15
5.4 AMPLIFIER CONNECTIONS and FUNCTIONS .....	15-16
5.4.1 DC BUSS .....	15
5.4.2 MOTOR .....	15
5.4.3 SIGNAL INPUT .....	15
5.4.4 TACHOMETER INPUT .....	15
5.4.5 CURRENT SENSE .....	16
5.4.6 + and - LIMITS .....	16
5.4.7 TOTAL INHIBIT .....	16
5.4.8 FAULT INPUT/OUTPUT .....	16
5.4.9 FAULT RESET .....	16
<b>CHAPTER SIX: START UP and ADJUSTMENT PROCEDURE</b>	
6.1 SAFETY PRECAUTIONS .....	17
6.2 AMPLIFIER ALIGNMENT INTRODUCTION .....	17
6.3 VELOCITY-LOOP PHASING .....	17-18
6.4 TACH-GAIN ADJUSTMENT .....	18-19
6.5 CONNECTING AMPLIFIER to DIGITAL POSITION LOOP .....	19-20
6.6 CALIBRATION-SETUP RECORD .....	20
<b>CHAPTER SEVEN: MAINTENANCE, REPAIR and WARRANTY</b>	
7.1 MAINTENANCE .....	21
7.2 REPAIR .....	21-23
7.2.1 FAULT TRACING CHARTS .....	21
7.2.2 PART REPLACEMENT .....	21



## GA4567EPC and GA4568EPB MANUAL

<b>CHAPTER SEVEN: MAINTENANCE, REPAIR, and WARRANTY con't</b>	<b>PAGE</b>
7.2.3 RESETING A FAULT .....	22
7.2.4 OVER-TEMPERATURE SHUTDOWN .....	22
7.2.5 OVER-VOLTAGE SHUTDOWN .....	22
7.2.6 LOW-SPEED ELECTRONIC CIRCUIT BREAKER (LS/ECB) SHUTDOWN .....	23
7.2.7 HIGH-SPEED ELECTRONIC CIRCUIT BREAKER (HS/ECB) SHUTDOWN .....	23
7.3 FACTORY REPAIR .....	23
7.4 WARRANTY .....	24

### APPENDIX A: FAULT TRACING CHARTS

FAULT CHART 1: Motor does not turn in either direction .....	A2
FAULT CHART 2: Motor only turns in one direction .....	A3
FAULT CHART 3: Motor does not develop maximum output speed .....	A4
FAULT CHART 4: Motor does not develop maximum output torque .....	A5
FAULT CHART 5: Motor wanders and hunts or does not track smoothly .....	A6
ENGINEERING NOTES FOR FAULT TRACING CHARTS .....	A7

### APPENDIX B: AMPLIFIER DRAWINGS

INSTALLATION SCHEMATIC GA4567EPB (4567-7007) .....	B2
AMPLIFIER BOARD ASSEMBLY GA4567EPB (4567-7012) .....	B3
INSTALLATION DRAWING: GA4567EPB SINGLE-AXIS (4567-7008) .....	B4
INSTALLATION DRAWING: GA4567EPB TWO-AXIS (4567-7009) .....	B5
INSTALLATION DRAWING: GA4567EPB FOUR-AXIS (4567-7010) .....	B6
INSTALLATION DRAWING: GA4567EPB SIX-AXIS (4567-7011) .....	B7
INSTALLATION SCHEMATIC GA4568EPB (4568-3209) .....	B8
AMPLIFIER BOARD ASSEMBLY GA4568EPB (4568-3210) .....	B9
INSTALLATION DRAWING: GA4568EPB SINGLE-AXIS (4568-3205) .....	B10
INSTALLATION DRAWING: GA4568EPB TWO-AXIS (4568-3206) .....	B11



## GA4567EPC and GA4568EPB MANUAL

INSTALLATION DRAWING: GA4568EPB FOUR-AXIS (4568-3207) .....B12

INSTALLATION DRAWING: GA4568EPB SIX-AXIS (4568-3208) .....B13

### APPENDIX C: PERSONALITY PREAMP

SCHEMATIC: VELOCITY-MODE PERSONALITY PREAMP (4597-7000) .....C2

ASSEMBLY: VELOCITY-MODE PERSONALITY PREAMP (4597-7002) .....C3

SCHEMATIC: CURRENT-MODE PERSONALITY PREAMP (4597-5104) .....C4

ASSEMBLY: CURRENT-MODE PERSONALITY PREAMP (4597-5105) .....C5



## CHAPTER ONE: INTRODUCTION

### 1.1 INTRODUCTION to the GA4567EPC and GA4568EPB MANUAL:

This manual provides all the technical information necessary to install, configure, use, and maintain our TORQUE-SWITCH™ series, servo-motor amplifier, model GA377. There is also an informative theory-of-operation section.

We suggest you take the time to read this manual cover-to-cover before you attempt to use one of these amplifiers for the first time. If, at any time, there are any questions that are not addressed in this manual, or there are any special requirements, please feel free to call and discuss them with a Glentek applications engineer. We are happy to provide both off-the-shelf and custom products. With almost three decades in the servo motor/amplifier business, we have a vast pool of applications knowledge waiting to assist you.

Thank you for selecting Glentek for your motion-control needs. It is our goal to save you money, time, and to provide you with a superior product.

**CHAPTER TWO: DESCRIPTION and SPECIFICATIONS****2.1 DESCRIPTION of the GA4567EPB and GA4568EPB:**

The GA4567EPB and GA4568EPB are modular, medium power, high band width, PWM, servo amplifiers designed for use with DC, permanent-magnet, servo motors. These amplifiers utilize today's latest technology in power semiconductors for high efficiency, which in turn makes them extremely reliable in today's and tomorrow's demanding applications.

**2.2 MODEL NUMBERING INFORMATION and AVAILABLE OPTIONS:**

**2.2.1 BASIC MODEL NUMBER:** The basic model number for these amplifiers is GA4567EPB and GA4568EPB. Several suffixes may be added to provide various options. These options are described below. Glentek will be happy to discuss any special requirements you may have.

**2.2.2 VELOCITY-MODE or CURRENT-MODE OPTIONS:** The GA4567EPC and GA4568EPB are most often used to close a critically-damped velocity-loop using a DC tachometer for velocity feedback. However, the high-gain, input summing-amplifier can be bypassed to provide an input directly to the current-loop amplifier. (Refer to Appendix C, drawings 4597-7000 & 4597-7002). If the amplifier is ordered with the current mode option, the dedicated Current Mode Personality Preamp Card will be used. (Refer to Appendix C, drawings 4597-5104 & 4597-5105)

**2.2.3 VELOCITY-TAPER CURRENT-LIMIT OPTION (GA4568EPB ONLY):** The Velocity-Taper Current-Limit (VTCL) option limits the maximum available motor current in proportion to the motor RPM. This protects the motor and amplifier from commutator arcing at high RPM. Refer to section 2.3.8 for additional information. Consult a Glentek applications engineer to optimize the VTCL to your application.

**2.2.4 LOGIC-INPUT CONFIGURATION:** There are four logic inputs: + Limit, - Limit, Inhibit, and Fault. The first three may be configured for active-high or active-low signals, and pulled-up or pulled-down termination (type A, B, C, and D). The fault is always active-low and pulled-up (type A). All the logic inputs on the GA4567EPC have a selectable 0 to +5 or 0 to +15 range. The logic inputs on the GA4568EPB have a +15 range only.


Type "A": Requires grounding of input to disable the amplifier (pull-up, active-low).

Type "B": Requires a positive voltage at input to disable the amplifier (pull-down, active-high).


Type "C": Requires grounding of input to enable the amplifier (pull-up, active-high).

Type "D": Requires a positive voltage at input to enable the amplifier (pull-down, active-low).

**2.2.5 MODEL NUMBERING:** The part number for a single type of amplifier module on the baseplate consists of an amplifier model number, an amplifier configuration code, a baseplate model number, and an optional baseplate, e.g:

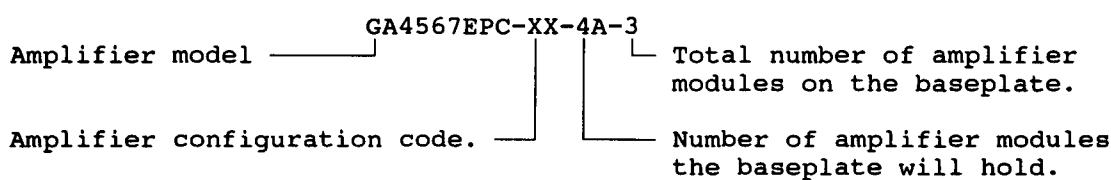


## MODEL NUMBER EXAMPLE:

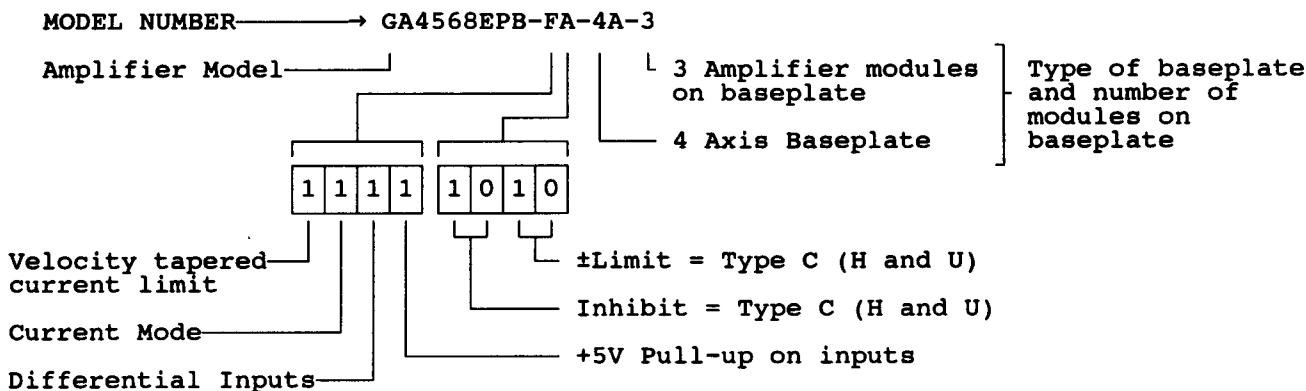AMPLIFIER MODULE CONFIGURATION

The two digits of the configuration code set amplifier options, such as the inhibit configuration. Most of these options are user-configurable. If you desire Glentek to pre-configure your amplifier, a configuration code may be constructed as shown below.

When constructing the configuration code, choose the desired configuration for each option and enter a "0" or a "1" in the box provided. When all the boxes are filled, convert the 8-digit number to a 2-digit number using the table provided.

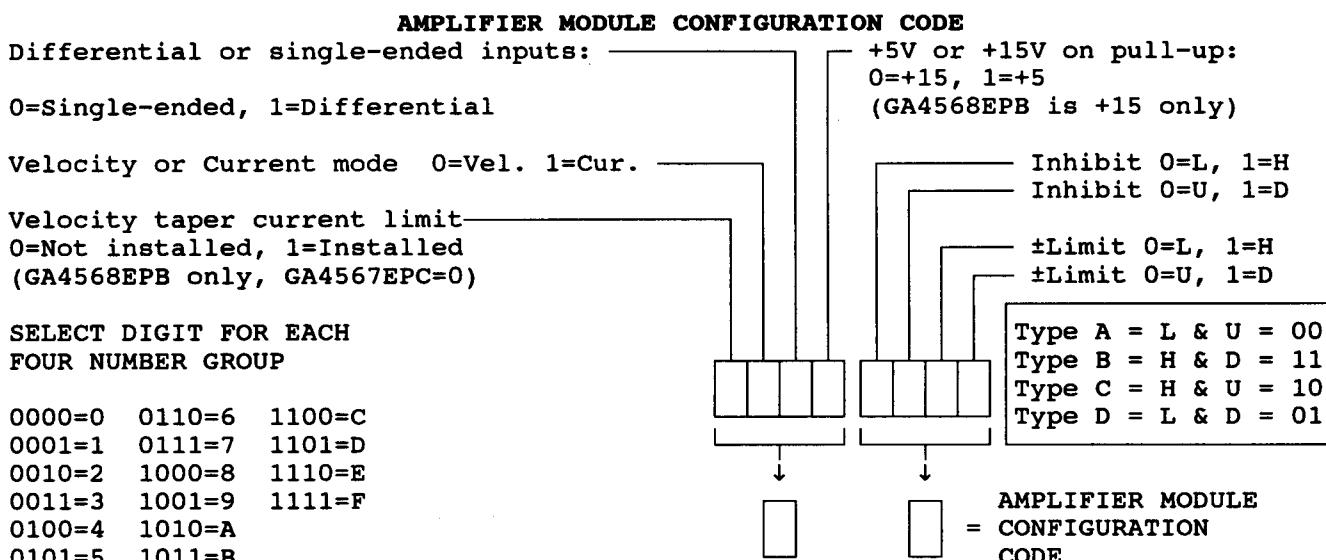

The following is a list of the standard baseplate amplifier combinations.

GA4567EPC-1	GA4568EPB-1	Single amplifier module.
GA4567EPC-1A-1	GA4568EPB-1A-1	One axis chassis with one amplifier module.
GA4567EPC-2A-1	GA4568EPB-2A-1	Two axis chassis with one amplifier module.
GA4567EPC-2A-2	GA4568EPB-2A-2	Two axis chassis with two amplifier modules.
GA4567EPC-4A-3	GA4568EPB-4A-3	Four axis chassis with three amplifier modules.
GA4567EPC-4A-4	GA4568EPB-4A-4	Four axis chassis with four amplifier modules.
GA4567EPC-6A-5	GA4568EPB-6A-5	Six axis chassis with five amplifier modules.
GA4567EPC-6A-6	GA4568EPB-6A-6	Six axis chassis with six amplifier modules.



## **2.3 PROTECTION CIRCUITS:**

The following protection circuits are integral to the GA4567EPC and GA4568EPB amplifiers to prevent damage to the amplifier or your equipment. Again, Glentek is anxious to work with you in helping to implement any circuit functions your system might require. Note: For sections 2.3.1 to 2.3.7, refer to Appendix B, drawings 4567-7007 and 4568-3209.

**2.3.1 FAULT INPUT/OUTPUT:** The open-collector fault output at TB2-12 will go low and latch for any of the following fault conditions:

1. High-Speed Electronic Circuit Breaker (HS/ECB) triggered.
2. Low-Speed Electronic Circuit Breaker (LS/ECB) triggered.
3. Transistor heatsink temperature in excess of 170°F (77°C)
4. DC Buss over-voltage condition.

The Fault output may also be externally pulled low to force a fault condition.

When the Fault output is on, all output current is removed from the motor and the loop gain is reduced. It is analogous to applying the Total Inhibit input.

**2.3.2 HIGH-SPEED ELECTRONIC CIRCUIT BREAKER (RED LED):** The HS/ECB LED indicator light will turn ON and latch, indicating that the High-Speed Electronic Circuit Breaker (HS/ECB) has fired. This circuit protects the amplifier from dead shorts across the amplifier output terminals. The HS/ECB is factory set and should not be adjusted.

**2.3.3 LOW-SPEED ELECTRONIC CIRCUIT BREAKER (RED LED):** The LS/ECB LED indicator light will turn ON and latch, indicating that the Low-Speed Electronic Circuit Breaker (LS/ECB) has fired. This circuit protects the motor, amplifier, and mechanical system from damage due to excessive mechanical bind in the system or possibly driving into a hard mechanical stop.


**2.3.4 OVER-TEMP INDICATOR OPERATION (RED LED):** The Over-Temp LED indicator light will turn ON and latch when the heatsink temperature exceeds 170°F (77°C).

**2.3.5 DC-BUSS OVER-VOLTAGE MONITOR (RED LED):** The Over-Volt LED1 indicator will turn on and latch when the DC Buss voltage exceeds 152VDC (4567) or 167VDC (4568). This protects the amplifier and motor from high DC-Buss voltages.

**2.3.6 RESETTING the FAULT LATCH:** The fault latch may be reset by pressing the Reset pushbutton on the amplifier board, by connecting TB2-14 to signal common, or by applying +8VDC to +18VDC to TB2-15. The fault latch will not reset unless the fault has been corrected.

**2.3.7 LOW-VOLTAGE POWER-SUPPLY MONITOR:** The on-board, low-voltage power-supply will automatically shut down if it can not maintain  $\pm 15$ VDC. This is a non-latched condition. The amplifier will return to normal operation when the voltages return to normal.

**2.3.8 VELOCITY-TAPER CURRENT-LIMIT (GA4568EPB ONLY):** Motor specifications often include an SOA (Safe Operating Area) curve which is maximum motor current as a function of RPM (See figure 2.3.7). The optional VTCL (Velocity-Taper Current-Limit) ensures that the maximum available motor current is within SOA limits. Below maximum, the motor current is still controlled by the velocity-error (or current-command) signal. The VTCL may decrease the rate of acceleration and deceleration. Consult a Glentek applications engineer before ordering.

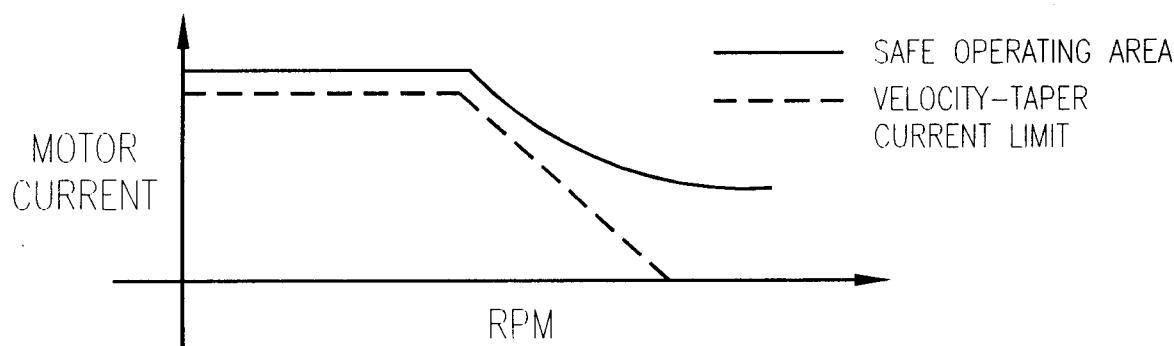

**Figure 2.3.7**

## 2.4 SPECIFICATIONS:

### 2.4.1 OUTPUT POWER: (Each amplifier.)

	GA4567EPB	GA4568EPB
PEAK OUTPUT CURRENT:	$\pm 25$ ADC	$\pm 40$ ADC
RMS OUTPUT CURRENT:	$\pm 15$ ADC	$\pm 20$ ADC
OUTPUT VOLTAGE (Typical):	$\pm 100$ VDC	$\pm 100$ VDC

Note: Buss voltage should be selected to be 10% to 20% above the maximum voltage required at the motor terminals for maximum system efficiency. Higher buss voltages available, consult Glentek.

### 2.4.2 INPUT POWER:

DC BUSS (Typical):	70VDC to 100VDC
DC BUSS (Maximum):	140VDC

The DC Buss voltage is provided to each amplifier by a power supply on the baseplate. Input power to the base plate is as follows:

FANS: 120VAC, 50/60Hz, 1A.

MAIN POWER (for DC Buss) 50VAC to 100VAC, 50/60Hz, single- or three-phase.

NOTE: This power is supplied by a separately mounted power-transformer selected for your application. This transformer is not considered a standard part of the amplifier package. Glentek stocks a complete line of power transformers to meet any application.

## GA4567EPC and GA4568EPB MANUAL

### 2.4.3 SIGNAL INPUTS:

#### VOLTAGE, MAXIMUM:

Aux. Input:	$\pm 13$ volts.
Sig. Input:	$\pm 70$ volts.
Tach. Input:	$\pm 90$ volts.
Input impedance:	10K ohms minimum.

#### GAIN, MAXIMUM

Sig., and Aux., Inputs:	15,000 amps/volt.
Tachometer:	7,000 amps/volt.
Drift (ref., to input), maximum:	0.01 mV/ $^{\circ}$ C.
Frequency response, minimum:	750 Hz.
Dead band:	none.
Form factor:	1.01.

### 2.4.4 OTHER INPUTS and OUTPUTS

Limits and Inhibit inputs:	Terminated by 10K ohms minimum to com or + 15V. Thresholds at 4.2V and 10.3V.
Fault input/output:	As input: Terminated by 3.3K ohms to + 15VDC. Threshold at 1.5VDC. As output: Can sink 500mA through 100 ohms.

### 2.4.5 OTHER SPECIFICATIONS

Carrier frequency:	20Khz.
--------------------	--------

### 2.4.6 MECHANICAL (SEE APPENDIX B4 & B6)

Mounting:	Any Position.
Temperature:	122 $^{\circ}$ F (50 $^{\circ}$ C) ambient max.
Weight & Dimensions:	See appendix B3 through B6.

### 2.4.7 TYPICAL FACTORY SETTINGS

Sig. Gain:	5V(Sig.)/7V(Tach.)
Aux. Gain:	Not set
Tach. Gain:	50%
Loop Gain:	CCW (OFF).
Comp:	CW (min. bandwidth).

GA4567EPB

GA4568EPB

LS/ECB:	15A for 1.5s	20A for 1.5s.
HS/ECB:	35A for 10us	60A for 10us.



**CHAPTER THREE: PERSONALITY PREAMP CARD****3.1 INTRODUCTION to the PERSONALITY PREAMP CARD:**

The Personality Preamp card is a modular, plug-in card that comes in two versions: velocity mode and current mode. Schematic and board assembly prints for these cards are found in Appendix C, drawing numbers 4597-7000, 4597-7002, 4597-5104, and 4597-5105, and will be referred to in the following description.

The Personality card contains the main high-gain preamp with all associated system alignment adjustments. This card greatly enhances system trouble shooting and repair. If an amplifier should fail, simply remove the Personality card (which has all of the original system constants adjusted in) and re-place it on a spare amplifier. This eliminates system realignment when changing out amplifiers. Also, a motor-tach-load may be aligned at the factory and the Personality card only sent to the field for system test.

**3.1.1 VELOCITY-MODE PERSONALITY PREAMP CARD:** The Velocity-Mode Preamp card contains the main high-gain preamp with all the associated system alignment adjustments to close a velocity loop using a D.C. tachometer for velocity feedback (Refer to Appendix C, drawings 4597-7000 and 4597-7002).

**3.1.2 CURRENT-MODE PERSONALITY PREAMP CARD:** The Current-Mode Personality preamp card contains all the system alignment adjustments to control a current-mode amplifier (Refer to Appendix C, drawings 4597-5104 and 4597-5105).

**3.2 DESCRIPTION of OPTIONS and ADJUSTMENTS:**

The Personality Preamp card is a small printed-circuit card (2.7" x 2.3") standing on nine pins (0.6" long) that mate with appropriate sockets on the amplifier control board.

The Personality card is most often used to close a velocity loop by using a DC tachometer for velocity feedback. However, the high-gain, input summing-amplifier can be bypassed providing an input directly to the current-loop amplifier (Current-Mode option). If the Current-Mode (CM) option is specified, the committed Current-Mode Personality Preamp card will be supplied.

**3.2.1 POTENTIOMETER ADJUSTMENTS:** The following is a description of the potentiometer adjustments used for the two modes of operation. Please refer to Chapter Six on Start Up and Adjustment Procedures for a detailed description of how to set these potentiometers.

**VELOCITY MODE:** (Refer to Appendix C, drawings 4597-7000 and 4597-7002)

- R12 Signal-Gain potentiometer sets the input voltage to output RPM required by your system for the single-ended input (e.g.: 10 volt input = 2000 RPM).
- R13 Auxiliary Signal-Gain potentiometer sets the input voltage to output RPM required by your system for the differential signal input (e.g.: 10 volt input = 2000 RPM).
- R14 Tachometer-Gain potentiometer sets the amount of tach' signal required by your system. Use in conjunction with the Compensation potentiometer, R16, to adjust the system bandwidth.



## GA4567EPC and GA4568EPB MANUAL

- R15 Balance potentiometer is used to null out any DC offset in the amplifier (e.g.: 0 volt input = 0 RPM).
- R16 Compensation potentiometer, R16, is used to adjust the system bandwidth (frequency response) required by your system. Use in conjunction with the Tachometer-Gain potentiometer, R14, to adjust the system bandwidth.
- R17 Current-Limit potentiometer sets the maximum acceleration and deceleration current.
- R18 Loop-Gain potentiometer is used to reduce the velocity-loop gain to zero when the system is first turned on to prevent run away operation. Before turning the system on for the first time, this potentiometer is set fully CCW to command zero current to the motor. Once the system is correctly phased this potentiometer is set fully CW for all further system adjustments.

### **CURRENT MODE:** (Refer to Appendix C, drawings 4597-5000 and 4597-5002)

- RV2 Signal-Gain potentiometer sets the input voltage to output current required by your system for the single-ended input (e.g.: 5 volt input = 20 amp output current).
- RV1 Auxiliary Signal-Gain potentiometer sets the input voltage to output current required by your system for the differential signal input (e.g.: 5 volts input = 20 amps current).
- RV4 Current-Limit potentiometer sets the maximum acceleration and deceleration current.
- RV5 Loop-Gain potentiometer is factory set to prevent amplifier maximum rated current from being exceeded when the current-limit potentiometer is fully CW.
- RV3 Balance potentiometer is used to null out any DC offset in the amplifier (e.g.: 0 volts input = 0 current output)

### **3.2.2 INPUT and OUTPUT SIGNALS:**

<u>Pin</u>	<u>NAME</u>	<u>FUNCTION</u>
1.	SIGNAL:	Single-ended signal input.
2.	+ 15 VDC:	+ 15 VDC power.
3.	- 15 VDC:	- 15 VDC power.
4.	COMMON:	$\pm 15$ VDC and signal common.
5.	AUXILIARY:	+ differential signal input.
6.	AUXILIARY RETURN:	- differential signal input.
7.	OUTPUT:	Velocity-error or current-command
8.	CLAMP:	Reduces gain of the summing amplifier.
9.	TACHOMETER:	Tachometer signal input.

### 3.3 REMOVAL and INSTALLATION:

When removing or installing the Personality Preamp card, **care must be taken not to damage any of the components** on the Amplifier card or on the Personality card.

**Removal:** Hold the Personality card by its edges and pull straight away from the Amplifier Controller board (**Do not pull on the components**). For amplifiers with the Personality card mounted vertically, remove amplifier module first before unplugging Personality card.


**Installation:** Hold the Personality card by its edges and carefully align the nine pins with their respective mating sockets and push straight toward the amplifier controller board until it is firmly seated (**Do not press on any of the components**).

### 3.4 TROUBLE SHOOTING with the PERSONALITY PREAMP CARD:

If your system exhibits a problem, and a working amplifier module is available, fault tracing can be expedited by removing the Personality Preamp card from the malfunctioning amplifier, plugging it into the replacement amplifier, and testing the system. If the system does not work with the new amplifier module, refer to Chapter Seven on Maintenance and Repair for a more detailed fault tracing procedure. However, If the system does work with the new amplifier module, check the malfunctioning unit for loose connections and retest the suspected unit in the system to verify the malfunction.

**CHAPTER FOUR: THEORY of OPERATION****4.1 INTRODUCTION to THEORY of OPERATION:**

A velocity-mode servo amplifier is essentially comprised of two control loops (fig. 4.1).

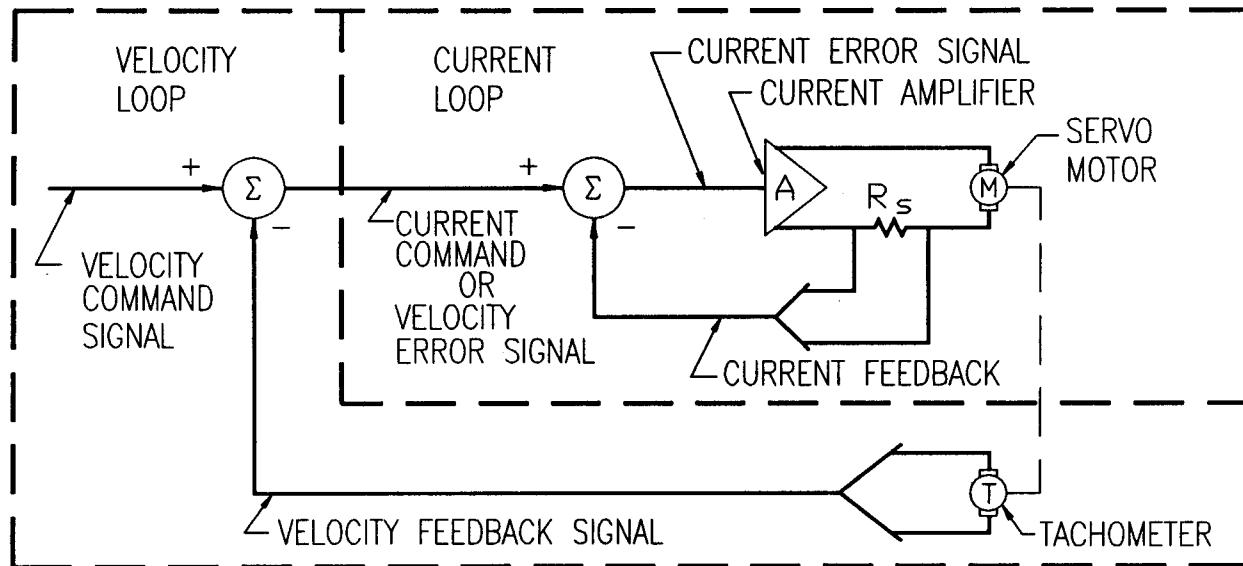**Figure 4.1**

The inside control loop is referred to as the "current loop" and the outside loop is referred to as the "velocity loop". Before we begin our analysis of the current loop, let us review some basic concepts which will help you to better understand the amplifier's operation.

**4.2 OPERATION of OUTPUT SWITCHING TRANSISTORS:**

The output transistors, for all intents and purposes, operate in only two states. They are analogous to ON/OFF switches. When an output transistor is OFF, there is no current flowing through it (its resistance is infinite). When an output transistor is ON, current flows through it (its resistance is near zero). When the transistor is ON, it is technically referred to as being in saturation.

**4.3 "H TYPE" OUTPUT BRIDGE CONFIGURATION:**

The output configuration of the amplifier is an "H TYPE" bridge (see fig. 4.2 for schematic representation of output bridge with motor connected).

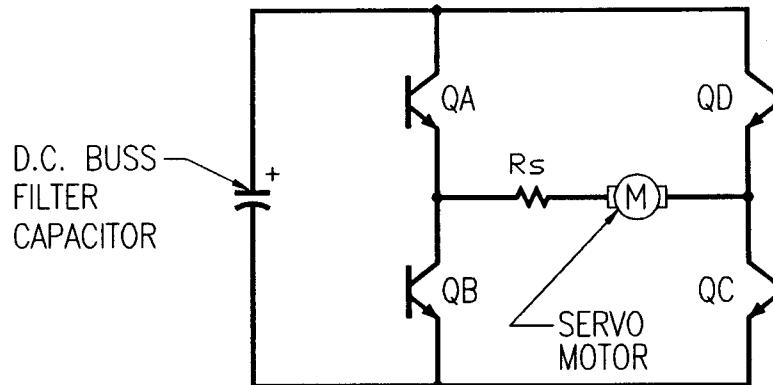


Figure 4.2

The advantage of an "H TYPE" output bridge configuration is that by controlling the switching of the opposite pairs of transistors, current can be made to flow through the motor in either direction using a single-polarity power supply as shown in figure 4.2.

To provide motor current in one direction, transistors A and C are turned ON, while B and D remain in the OFF state. To provide motor current in the other direction, B and D are turned ON, while A and C remain in the OFF state.

#### 4.4 PULSE-WIDTH-MODULATION (PWM):

"Pulse-width modulation" is the technique used for switching opposite pairs of output transistors ON and OFF to control the motor drive current. When zero current is commanded to the current loop, the opposite pairs of transistors are turned ON and OFF as shown in figure 4.3. Note that since the pulse widths are equal, the net DC current in the motor is equal to zero.


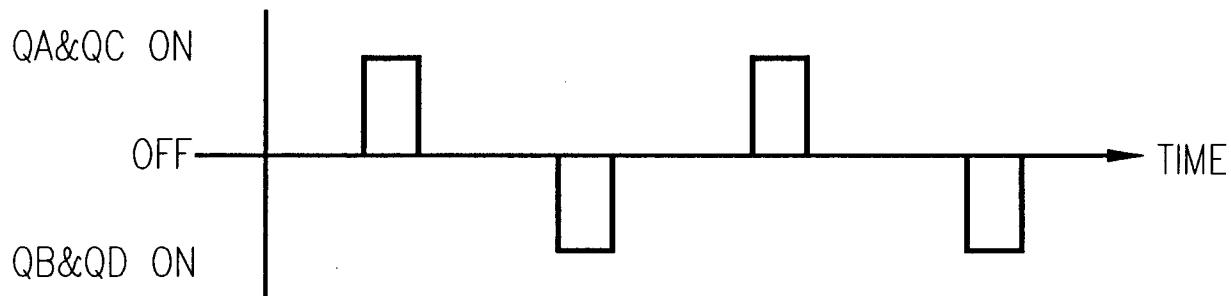



Figure 4.3

When a non-zero current is commanded to the current loop, the transistor switching waveform is as shown in figure 4.3A. Since there is a non-zero current command, the output transistor pulse widths will change and the motor will see a net DC current flowing from A through C.

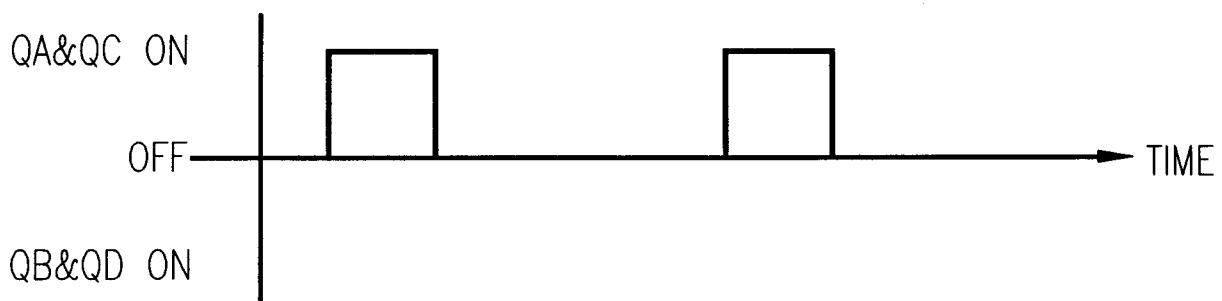

**Figure 4.3A**

If the input to the current loop had been changed in polarity, the output transistor switching waveform would be as shown in figure 4.3B.

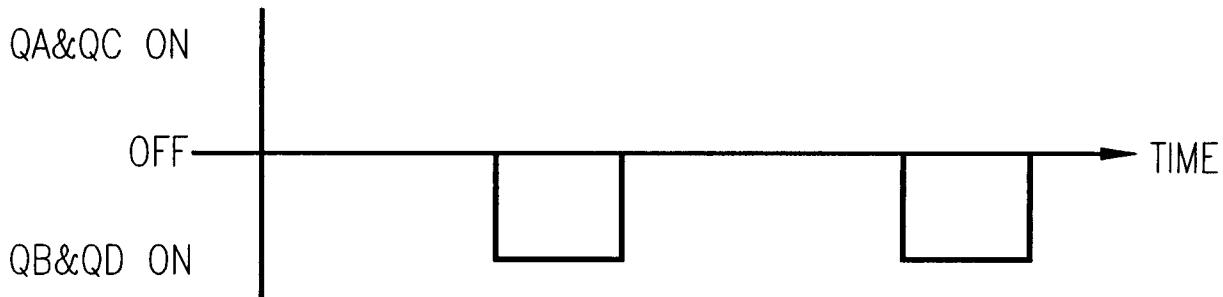

**Figure 4.3B**

If a larger current of the same polarity was commanded to the output transistors (see fig. 4.3B) the ON-time widths of B and D would automatically increase to provide more current.

From the previous examples it is easy to understand why this output transistor switching technique is referred to as pulse-width modulation.

To change the magnitude and polarity of the current flow in the motor, the pulse widths of the opposite pairs of transistors are modulated. The frequency at which these output transistors are switched ON and OFF is referred to as the "carrier frequency".

After realizing how the PWM amplifier output works, it becomes apparent that some inductance must be added to the motor circuit to prevent excessively high AC ripple current and heating in the servo motor. Consult a Glentek applications engineer for recommended inductance.

Now that we have a good understanding of how the current is provided from an "H TYPE" pulse-width modulated (PWM) bridge, let's analyze the operation of the current loop.

#### 4.5 CURRENT-LOOP OPERATION:

Please refer to figure 4.1 for a diagram of the current loop. In control electronics the symbol Sigma (with the circle around it) is referred to as a "summing junction". The manner in which this summing junction operates is as follows:

The current-command signal (also referred to as the velocity-error signal when received from the output of the velocity loop, as shown in fig. 4.1) is added to the current-feedback signal. The signal resulting from this addition, is referred to as the "current-error" signal. This current-error signal is fed into the current amplifier, which in turn produces a current in the motor. A voltage which is proportional to the motor current is developed across  $R_s$  (shunt resistor). This voltage is referred to as the "current-feedback" signal. The current in the motor increases until the current-feedback signal is exactly equal in magnitude, but opposite in polarity, to the current-command signal. At this point the current-error signal drops to zero, and the actual current is equal to the commanded current. If anything happens to disturb either the current-command signal, or the current-feedback signal, the same process occurs again until the current-feedback signal is equal in magnitude to the current-command signal, but opposite in polarity.

The type of loop described above is referred to as a "servo loop" because the current servos about a commanded value.

We are surrounded in our everyday lives by a multitude of servo loops. For example, many of today's luxury cars have what is called "automatic climate control". To operate this servo loop, you set the climate control to the temperature that you wish to be maintained in the interior of the car (current-command signal). The selected temperature is then summed with the actual temperature from a thermometer (current-feedback), and the output (current-error signal) activates either the heater or the air-conditioner until the actual temperature as measured by the thermometer (current-feedback signal) is equal in magnitude, but opposite in polarity, to the set temperature.

#### 4.6 VELOCITY-LOOP OPERATION:

Please refer to figure 4.1 for a diagram of a typical velocity loop. The velocity-loop's operational description is analogous to the current-loop description, except for the fact that the input signal is called the Velocity Command and the feedback signal from the DC tachometer is called the Velocity Feedback.

## GA4567EPC and GA4568EPB MANUAL

### CHAPTER FIVE: INSTALLATION PROCEDURE

#### 5.1 MOUNTING:

The installation diagrams in Appendix B show the bolt hole mounting pattern to support the amplifier. The mounting holes will accept 1/4 inch dia. bolts.

#### **THE MOUNTING BOLTS SHOULD PROVIDE AN ELECTRICAL GROUND FOR THE CHASSIS TO MINIMIZE SHOCK HAZARD.**

The surface that the amplifier package will be mounted on must be able to support its weight, but does not need to provide "cold plate" cooling for the amplifier. One, two, or three standard muffin fans are mounted on the baseplate to cool the amplifiers.

**It is IMPORTANT to allow a minimum of three inches between both the fan side and the module side (opposite fans) of the amplifier baseplate and the cabinet wall.**

The distance between the other two sides and top of the amplifier and the cabinet walls are not critical. However, some space should be provided for wire routing and terminal strip access.

The amplifier package should be mounted in a clean, dry, enclosure with a maximum ambient temperature of 122°F (50°C). To ensure maximum reliability, keep the amplifier cabinet cool and free from dust, oil and other contaminates.

#### **NEVER INSTALL THE AMPLIFIER PACKAGE IN ANY LOCATION WHERE FLAMMABLE OR EXPLOSIVE VAPORS ARE PRESENT**

#### 5.2 WIRING SIZE and PROPER TECHNIQUE:

Please refer to the installation diagrams in Appendix B. These installation diagrams show the necessary external connections to ensure proper amplifier operation.

Glentek recommends that your wiring be in accordance with all national and local codes that are applicable to your system. Wire size must be sufficient to accommodate the maximum continuous current that will be run through it.

Recommended wire sizes for the amplifier are as follows:

MOTOR ARMATURE:	14AWG (4567) or 12AWG (4568), shielded twisted pair or run in metallic conduit (for RFI suppression).
MAIN AC POWER INPUT:	12AWG, twisted pair.
120VAC and $\pm$ 15VDC:	16AWG, twisted pair.
SIGNAL INPUT:	22AWG, shielded twisted-pair
TACHOMETER INPUT:	22AWG shielded twisted-pair. Terminate shield, at amplifier end only, to Tachometer Common, TB1-6

When wiring to-and-from the drive cabinet, it is considered good technique to route the power lines (16 AWG and larger) along different paths than the signal and tachometer lines. This minimizes the amount of stray noise pick-up that is injected into the amplifier.

### 5.3 BASEPLATE CONNECTIONS:

**5.3.1 120 VAC 50/60 Hz FOR FANS:** Connect the 120VAC to terminals 5 and 6 of terminal barrier-strip TB201 located on the baseplate.

**DO NOT APPLY ANY POWER YET.**

**5.3.2 INPUT from SECONDARY of POWER TRANSFORMER:** The AC voltage that is used to form the DC buss of the amplifier package, is supplied from a separately mounted transformer that has been selected by Glentek for your application. Connect the secondary of the power transformer to input terminals 1 & 2 of TB201 for a single-phase input, and terminals 1, 2, & 3 for a three-phase input.

**DO NOT APPLY ANY POWER YET.**

### 5.4 AMPLIFIER CONNECTIONS and FUNCTIONS:

**5.4.1 DC BUSS:** The DC Buss, from the filter capacitor, is connected to terminals 1 (+) and 2 (-) of terminal strip TB2 (4567), or TB1 (4568) on each amplifier. This connection is already made for you on our multi-axis packages. The power transformer is not a standard part of the amplifier package and must be selected for your application. Many sizes and styles are in stock at Glentek.

**5.4.2 MOTOR:** The motor is connected to terminals 1 (-) and 2 (+) of terminal strip TB201 of the amplifier module. In most cases, if the motor inductance is less than 1 millihenry, an inductor should be connected in series with the motor leads. The inductor is considered to be a separate part from the amplifier package. Glentek can advise on the inductor specifications, and most styles and sizes are in stock at Glentek.

**IT IS IMPERATIVE THAT YOU DO NOT USE GROUNDED TEST EQUIPMENT ON  
THE MOTOR ARMATURE NOR CONNECT EITHER END OF THE MOTOR ARMATURE  
TO SIGNAL GROUND OR DC BUSS RETURN.**

**5.4.3 SIGNAL INPUT:** Each amplifier has two Signal Inputs, one single-ended (Signal Input), TB2-3 & TB2-4, and one differential (Auxiliary Signal Input and Auxiliary Return), TB2-1 & TB2-2 respectfully. Typically, when operating in the velocity mode, the input signal range is  $\pm 10$ VDC. The input voltage is summed with a precision DC tachometer to provide accurate velocity control at the servo motor shaft (see fig. 4.1). The Signal Gain potentiometer R12, and Auxiliary Gain potentiometer, R13, adjust the motor velocity desired for a given input-voltage velocity-command.

**5.4.4 TACHOMETER INPUT:** The Tachometer is connected to TB2-5 & TB2-6.

## GA4567EPC and GA4568EPB MANUAL

**5.4.5 CURRENT SENSE:** The Current Sense output signal can be monitored at TB2-7. It is an isolated output signal that is proportional to motor current. The scale factor is 1V=10A.

**5.4.6 + and - LIMITS:** The + and - Limits are located at TB2-8 & TB2-9, respectively. Please refer to 2.2.3 for a description of the different configurations of limits that are available. Amplifier modules are normally shipped with type "A" limits which means that when a limit input is pulled to common by some external circuit, the amplifier is inhibited in the + or - direction.

**5.4.7 TOTAL INHIBIT:** The Total Inhibit is located at TB2-10. Please refer to 2.2.3 for a description of the different configurations of inhibit that are available. Amplifier modules are normally shipped with type "A" inhibit which means that when the inhibit input is pulled to common by some external circuit, the amplifier is totally inhibited.

**5.4.8 FAULT INPUT/OUTPUT:** The fault input/output is on TB2-12. Please refer to chapters 2.3 and 7 for a description of the protection circuits that will generate a fault. When there is a fault, this open-collector output will go to ground. Externally pulling this pin to ground will inhibit the amplifier. Thus, connecting this pin on all amplifiers together will cause all amplifiers to shut down if any amplifier has a fault.

**5.4.9 FAULT RESET:** There are two reset inputs: Gnd to Reset on TB2-14, and + to Reset on TB2-15. Grounding pin 14 or applying +8VDC to +18VDC to pin 15 will reset the fault latch. Note that the fault latch will not reset unless the fault has cleared.

## CHAPTER SIX: START UP and ADJUSTMENT PROCEDURE

### 6.1 SAFETY PRECAUTIONS:

**Before starting the adjustment and alignment procedure please be sure to observe the following precautions:**

1. Be certain that there are no visibly loose or damaged components.
2. Check that all connections are tight.
3. Check all power and signal wiring. Remove power input fuses, apply power and measure that correct power voltage is being applied. Your DC buss voltage will be 1.4 times the AC voltage applied (Refer to Appendix A, note 1).
4. Be sure that the motor mechanism is clear of all obstructions. If motor is connected to an axis lead screw or other device with limited motion, place at mid-position.
5. Make sure Loop-Gain potentiometer (on Preamp card) is turned fully CCW before applying power.
6. **DO NOT** use grounded test equipment on motor leads or power section of amplifier.

### 6.2 AMPLIFIER ALIGNMENT INTRODUCTION:

The following procedure must be done to each amplifier in a multi-axis system. Work on only one amplifier at a time.

When adjusting an amplifier for optimum velocity-loop operation it is desirable to achieve a critically damped, stable-step velocity response with maximum Tach Gain. The following discussion will describe how to best achieve this result:

Your amplifier has been run at the factory with a known motor, tachometer and inertial load. In testing at the factory, we try to simulate the same conditions you will have in your system. For this reason it is a good idea to start with the initial settings as shipped from the factory.

**NOTE:** All of the following adjustments are to be made on the Personality Preamp card (Refer to Appendix C, drawings 4597-7000 & 4597-7002).

### 6.3 VELOCITY-LOOP PHASING:

For proper servo operation it is necessary for the amplifier to receive negative feedback from the tachometer. If the tachometer leads are reversed (positive feedback), the amplifier will run away. To check the phasing of the motor and tachometer proceed as follows:

1. Make sure Loop-Gain potentiometer, R18, is full CCW (as shipped from factory).
2. Make sure that nothing is connected to the Signal Input (TB2-3) or the Auxiliary Signal Input (TB2-1 & TB2-2).



## GA4567EPC and GA4568EPB MANUAL

3. Apply the main power and the 120 volt power.
4. Slowly turn the Loop-Gain potentiometer, R18, CW. If the motor starts to run away, turn the Loop-Gain potentiometer full CCW and reverse the tachometer leads (do not move the shield lead). Again, slowly turn the Loop-Gain potentiometer CW. The motor should be stopped or rotating slowly.
5. Leave the Loop-Gain potentiometer, R18, full CW for all remaining adjustments and operations.

### 6.4 TACH-GAIN ADJUSTMENT:

1. At this point the motor will be stopped or rotating slowly. Adjust the Balance potentiometer, R15, until the motor rotation is stopped.
2. While observing the tachometer output voltage with an oscilloscope, apply a step voltage at the Signal Input terminal of the amplifier. A step voltage can be simulated by applying and removing a flashlight battery to the Signal Input. For this purpose, the battery is usually mounted inside of a small box with a switch. Common names used to describe this DC signal voltage source are Battery Box or DC Simulator. Elaborate signal sources made for this purpose often include bipolar output, potentiometer output adjust and polarity reversing switches, etc. You often hear the phrase "**DC Box the velocity loop servo**" used by people working on servo systems.

(This Signal Box may be purchased from Glentek Inc., Part Number BB700)

3. At this point the motor should be running smoothly. While applying and removing the DC input signal, adjust the Current-Limit potentiometer, R17, for desired maximum acceleration and deceleration. Motor current should be observed by using an oscilloscope at TB2-7. The scale factor of this voltage is 1V=10A. Leave the Current-Limit potentiometer at this setting for all remaining adjustments.
4. Adjust the Signal-Gain potentiometer, R12, or the Aux Signal-Gain potentiometer, R13, (depending on the input you are using) so that when you apply the DC signal the motor rotates at approximately 400 RPM.
5. Observe the tachometer voltage with an oscilloscope while applying and removing the DC input signal. You will observe one of three possible waveforms: critically damped, under damped, or over damped (see figure 6.4).
6. The optimum waveform for most systems is the critically-damped waveform. If the waveform that you are observing is critically damped, proceed to step 9.
7. If your waveform is under damped, make the following adjustments:

Turn the Compensation potentiometer, R16, CCW until the waveform becomes critically damped. Note here that the limiting factor will be motor oscillation or "hunting". You must always leave the Compensation potentiometer far enough CW so that the velocity loop remains stable.

If the waveform is still under damped after adjusting the Compensation potentiometer for maximum bandwidth, turn the Tachometer-Gain potentiometer, R14, 2 turns CCW and then adjust Compensation potentiometer, R16, CCW until waveform becomes critically damped. Repeat procedure if necessary. Again, the servo velocity-loop must at all times remain stable. Consult the factory if necessary.

8. If the waveform is over damped, make the following adjustments:

Turn the Tachometer-Gain potentiometer, R14, CW until a slight overshoot appears on the waveform; then turn the Compensation potentiometer, R16, CCW until a critically damped waveform is observed.

9. Now that the waveform is critically damped, leave the Compensation, R16, and Tachometer Gain, R14, at these settings for all remaining adjustments and operations.

10. Next, set the Signal potentiometer, R12 or R13, to the gain required by your system (e.g. 10 volts = 2000 RPM).

11. Adjust Balance potentiometer, R15, one more time to null out any offset (with 0 volt input).

12. For all remaining adjustments when placing the amplifier in your system only the Signal potentiometer, R12 or R13, and Balance potentiometer, R15, should be adjusted.

Tach Voltage  
RPM

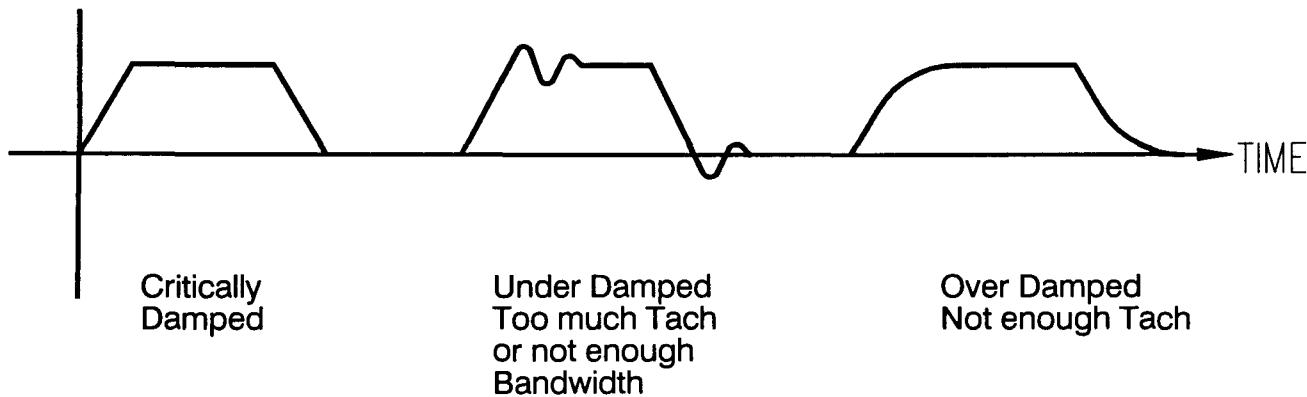


Figure 6.4

## 6.5 CONNECTING AMPLIFIER to a DIGITAL POSITION LOOP:

1. Before connecting the amplifier to a digital position loop, be sure the adjustments of section 6.4 have been made. Start out with Loop-Gain potentiometer, R18, fully CCW and activate the digital position loop. Slowly turn Loop-Gain potentiometer CW. If servo runs away, immediately adjust Loop Gain fully CCW and turn power OFF.



## GA4567EPC and GA4568EPB MANUAL

It is possible, at this time, that the digital loop is reverse phased. An example of this would be if a positive voltage from the velocity DAC (digital to analog converter) required the motor to turn CW. However, it turned CCW instead causing the encoder feedback signal to count up instead of down. This would cause a run away condition.

If you are out of phase as described, be sure power is OFF and reverse the motor leads at the amplifier. This will cause the motor to rotate in the opposite direction than it did before, properly phasing the digital loop.

- With the Digital Loop operating, turn the Loop-Gain potentiometer, R18, fully CW and command a small move. Slowly increase or decrease the Signal-Gain potentiometer, R12 or R13, until the servo is operating as required. It should be noted here that too much Signal Gain can cause instability (oscillation). **Do not** stay in this oscillating condition long, as it may result in system mechanical or electrical damage. Be sure when all signal adjustments are made that the Balance is re-checked and adjusted for zero rotation for zero signal input.

It should also be noted here that the GA4567EPB and GA4568EPB are designed to operate with many different systems and if, after reading this manual, there are any further questions, do not hesitate to call a Glentek applications engineer.

### 6.6 CALIBRATION-SETUP RECORD:

After all systems are aligned and functioning, it is good practice to remove power from the amplifier and, using a digital ohm-meter, measure the impedance value of the following potentiometer wiper settings with respect to signal ground. These values may be useful for the next machine you align or for maintenance of this system at a later date. Make these measurements on each amplifier on a multi-axis baseplate. For your convenience, this table has been provided.

	AMP 1	AMP 2	AMP 3	AMP 4	AMP5	AMP6
1. Tach-Gain potentiometer wiper to common (ohms):	_____	_____	_____	_____	_____	_____
2. Signal-gain potentiometer wiper to common (ohms):	_____	_____	_____	_____	_____	_____
3. Compensation potentiometer wiper to common (ohms):	_____	_____	_____	_____	_____	_____
4. Current limit potentiometer wiper to common (ohms):	_____	_____	_____	_____	_____	_____
5. Signal input to Tach input voltage ratio: _____ volts Signal. _____ volts Tach.	_____	_____	_____	_____	_____	_____

Date data taken: \_\_\_\_\_

Note any changes to compensation components, etc:



## CHAPTER SEVEN: MAINTENANCE, REPAIR and WARRANTY

### 7.1 MAINTENANCE:

The GA4567EPB and GA4568EPB amplifiers do not require any scheduled maintenance. The only wear-out items are the cooling fans which are specified to have in excess of 15,000 hours MTBF by their manufacturer.

### 7.2 REPAIR:

If your system exhibits a problem, this manual should assist you in identifying the fault and replacing the defective component or sub-assembly. It is Glentek's recommendation that only major assemblies be replaced in the field and the assemblies be returned to Glentek for failure analysis and repair. However, appendices B and C contain complete system schematics that, in case of extreme emergency, should permit a skilled electronic technician to trouble shoot the circuit boards to levels lower than those recommended as replaceable.

**7.2.1 FAULT TRACING CHARTS:** The fault tracing charts in Appendix A start with an observable fault listed at the top of each chart. Follow the line connections between blocks by your answers to the questions noted in the diamond shape blocks until the defective part is isolated. The charts are to be used only as a guide to identify the parts or assemblies that Glentek recommends as the lowest level of repair.

The fault tracing procedures assume that only a single failure mode exists.

Fault Chart 1	Motor does not turn in either direction.
Fault Chart 2	Motor only turns in one direction.
Fault Chart 3	Motor does not develop maximum output speed (no load applied) in either direction.
Fault Chart 4	Motor does not develop maximum output torque in either direction.
Fault Chart 5	Motor wanders and hunts or does not track smoothly.

After reviewing the fault tracing charts you may conclude that the complete amplifier should be returned to Glentek for failure analysis, repair and retesting to specifications. This is particularly true with failure modes in the amplifier power section.

**7.2.2 PART REPLACEMENT:** The removal and replacement of the defective assembly can be accomplished with standard shop procedures. The assemblies that may be easily removed are as follows:

1. Fuses F201-F203 the base plate and F1 on each amplifier.
2. Rectifiers BR201 and BR202.
3. Capacitor C201.
4. Fans 201 - 203.
5. Amplifier modules A1-A6.



**FAULT SHUT-DOWNS CAN ONLY BE CAUSED BY ABNORMAL CONDITIONS.  
THE CAUSE SHOULD BE INVESTIGATED BEFORE REPEATED RECYCLING OF THE  
MOTOR DRIVE TO PREVENT POSSIBLE DAMAGE TO THE AMPLIFIER**

**7.2.3 RESETTING A FAULT:** The fault latch may be reset by pressing the Reset pushbutton on the amplifier board, by connecting TB1-14 (4567) or TB2-14 (4568) to signal common, or by applying +8VDC to +18VDC to TB1-15 (4567) or TB2-15 (4568). Note that the fault latch will not reset unless the fault has been cleared.

**7.2.4 OVER-TEMPERATURE SHUTDOWN:** When the heatsink temperature has reached a level that, if exceeded, would damage the output transistors, the Temp indicator LED is latched ON and the amplifier will be inhibited.

Possible causes:

1. Loss of cooling air - Fans are defective or airflow is blocked.
2. Excessive rise in cooling air temperature due to cabinet ports being blocked or excessive hot air being ingested.
3. Extended operational duty cycle due to mechanical overload of motor or defective motor.
4. Defective power output section due to component failure (Return to Glentek for repair).
5. Noisy Tachometer Signal - A noisy tachometer causes a considerable amount of random switching of the power output transistors, thus increasing the amount of heat developed in the output section. The higher the bandwidth, the more the heating due to a noisy tachometer. A noisy tachometer can be identified by a large amount of rumbling and twitching of the motor at low or zero shaft speeds.

**7.2.5 OVER-VOLTAGE SHUTDOWN:** When the DC Buss voltage has exceeded 152VDC (4567), or 167VDC (4568), the Over-Voltage indicator will latch on and the amplifier will be inhibited. This circuit protects the motor and amplifier from high DC Buss voltages.

Possible causes:

1. AC main voltage too high.
2. Wrong power transformer installed.
3. A spinning DC motor is basically a DC generator which produces a back EMF in proportion to the RPM. This BEMF voltage adds to the DC Buss voltage (regen voltage) when the amplifier is commanded to decelerate a motor's inertial load. If the regen voltage is high enough to cause an Over-Voltage condition, consult with Glentek about adding a Regen Clamp to your system.

**7.2.6 LOW-SPEED ELECTRONIC CIRCUIT BREAKER (LS/ECB) SHUTDOWN:** The LS/ECB is tripped when a preset current threshold is exceeded for a preset length of time. See Typical Settings, section 2.4.7.

Possible causes:

1. Binding or stalling of motor shaft.
2. Overload of amplifier output to motor.
3. Large reflected load inertia.

**7.2.7 HIGH-SPEED ELECTRONIC CIRCUIT BREAKER (HS/ECB) SHUTDOWN:** The HS/ECB is tripped when a preset current threshold is exceeded for a preset length of time. See Typical Settings, section 2.4.7.

Possible causes:

1. Shorted motor leads.
2. Intermittent motor short.
3. Motor inductance too low.
4. Motor commutator flash over.

### 7.3 FACTORY REPAIR:

Should it become necessary to return a GA4567EPB or GA4568EPB to Glentek for repair, please follow the procedure described below:

1. Reassemble the unit, if necessary, making certain that all the hardware is in place.
2. Tag the unit with the following information:
  - A. Serial number and assembly unit.
  - B. Company name and representative returning the unit.
  - C. A brief notation explaining the malfunction.
  - D. Date the unit is being returned.
3. Repackage the unit with the same care and fashion in which it was received. Label the container with the appropriate stickers (e.g. FRAGILE: HANDLE WITH CARE).
4. Contact a Glentek representative, confirm the unit is being returned to the factory and obtain an RMA (Return Material Authorization) number.
5. Return the unit by the best means possible. The method of freight chosen will directly affect the timeliness of its return.

## **GA4567EPC and GA4568EPB MANUAL**

### **7.4 WARRANTY:**

Any product or part thereof manufactured by Glentek, Inc. described in the manual which, under normal operation conditions in the plant of the original purchaser thereof, proves defective in material or workmanship within one year from the date of shipment by us, as determined by an inspection by us, will be repaired or replaced free of charge FOB our factory, El Segundo, California provided that you promptly send to us notice of the defect and establish that the product has been properly installed, maintained and operated within the limits of rated and normal usage. Glentek's liability is limited to repair or replacement of defective parts.

Any product or part manufactured by others and merely installed by us, such as electric motors etc., is specifically not warranted by us and it is agreed that such product or part shall only carry the warranty, if any, supplied by the manufacturer. It is also understood that you must look directly to such manufacturer for any defect, failure, claim or damage caused by such product or part, including power transistors.

Under no circumstances shall Glentek, Inc. or any of our affiliates have any liability whatsoever for claims or damages arising out of the loss of use of any product or part sold to you. Nor shall we have any liability to yourself or anyone for any indirect or consequential damages such as injuries to person and property caused directly or indirectly by the product or part sold to you, and you agree in accepting our product or part to save us harmless from any and all such claims or damages that may be initiated against us by third parties.


**GA4567EPC and GA4568EPB MANUAL**

**APPENDIX A**

**FAULT TRACING CHARTS**




**- A1 -**

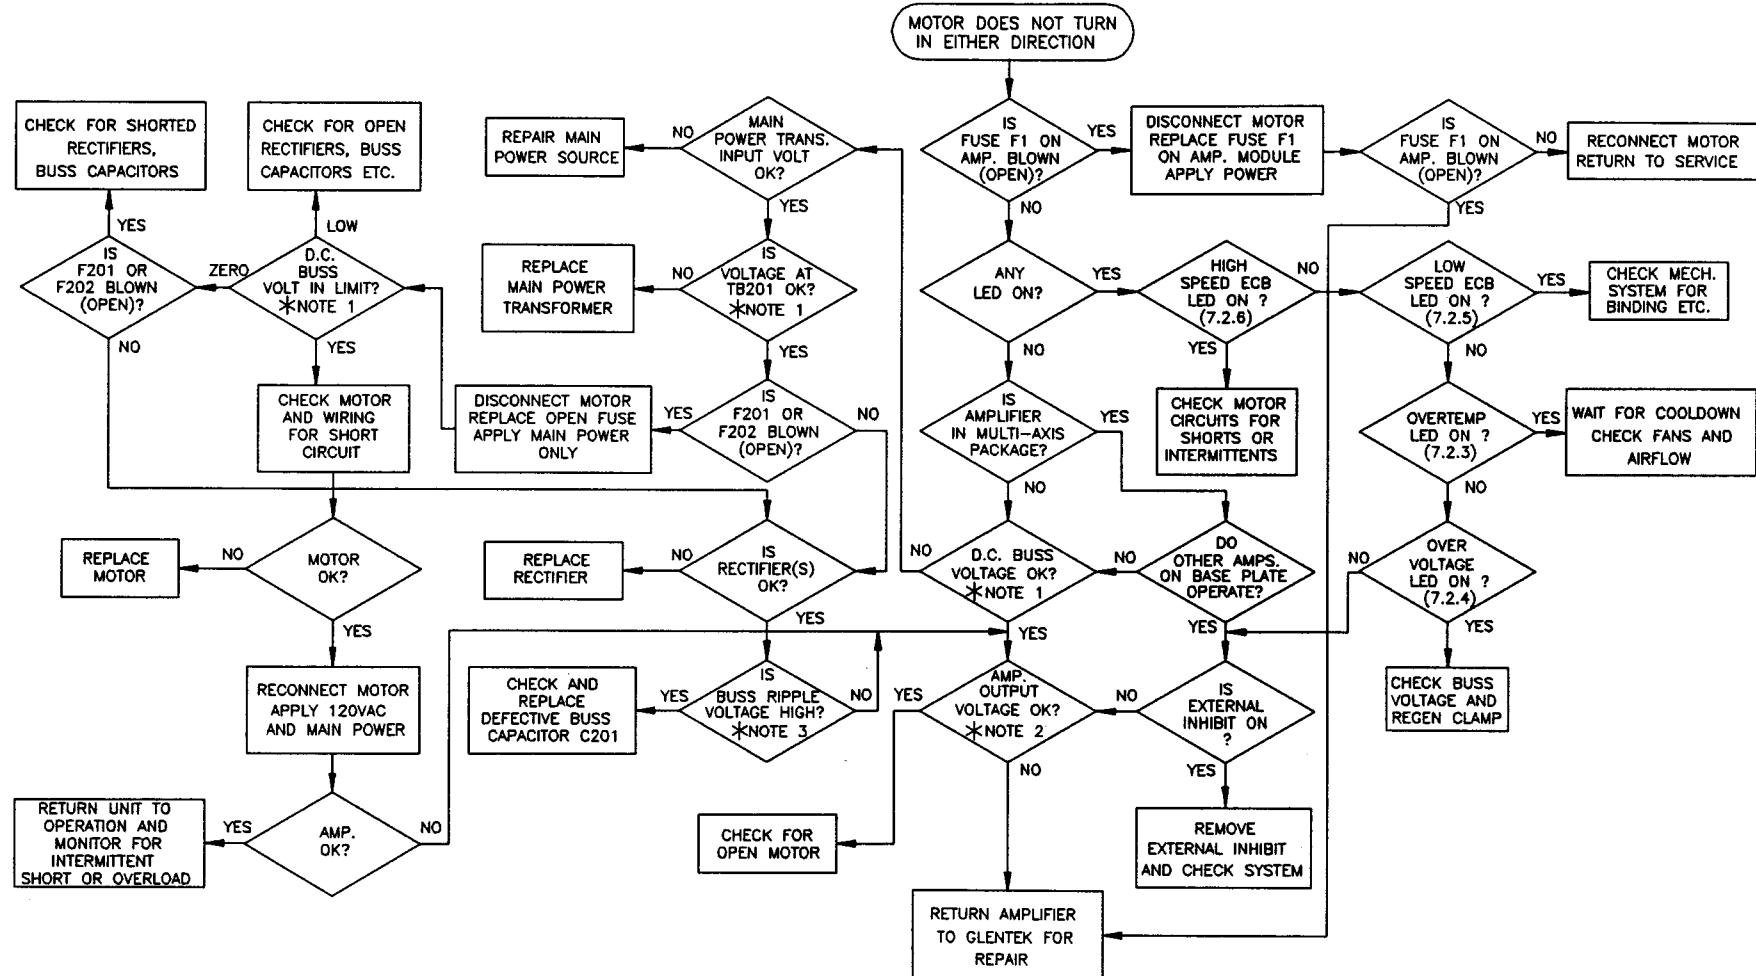


\*—See page A7

**GA4567EPC & GA4568EPB MANUAL  
APPENDIX A**

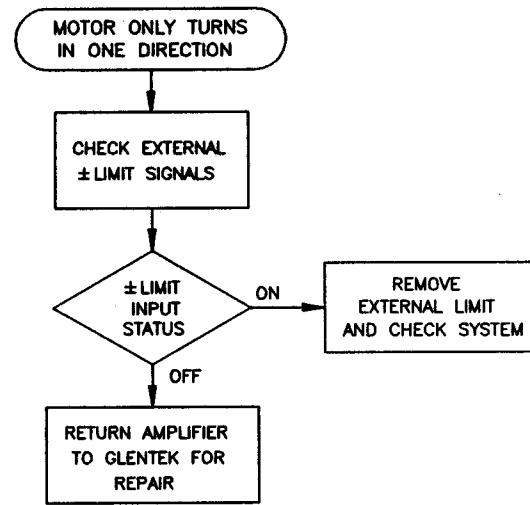


**GA4567EPC & GA4568EPB MANUAL  
APPENDIX A**

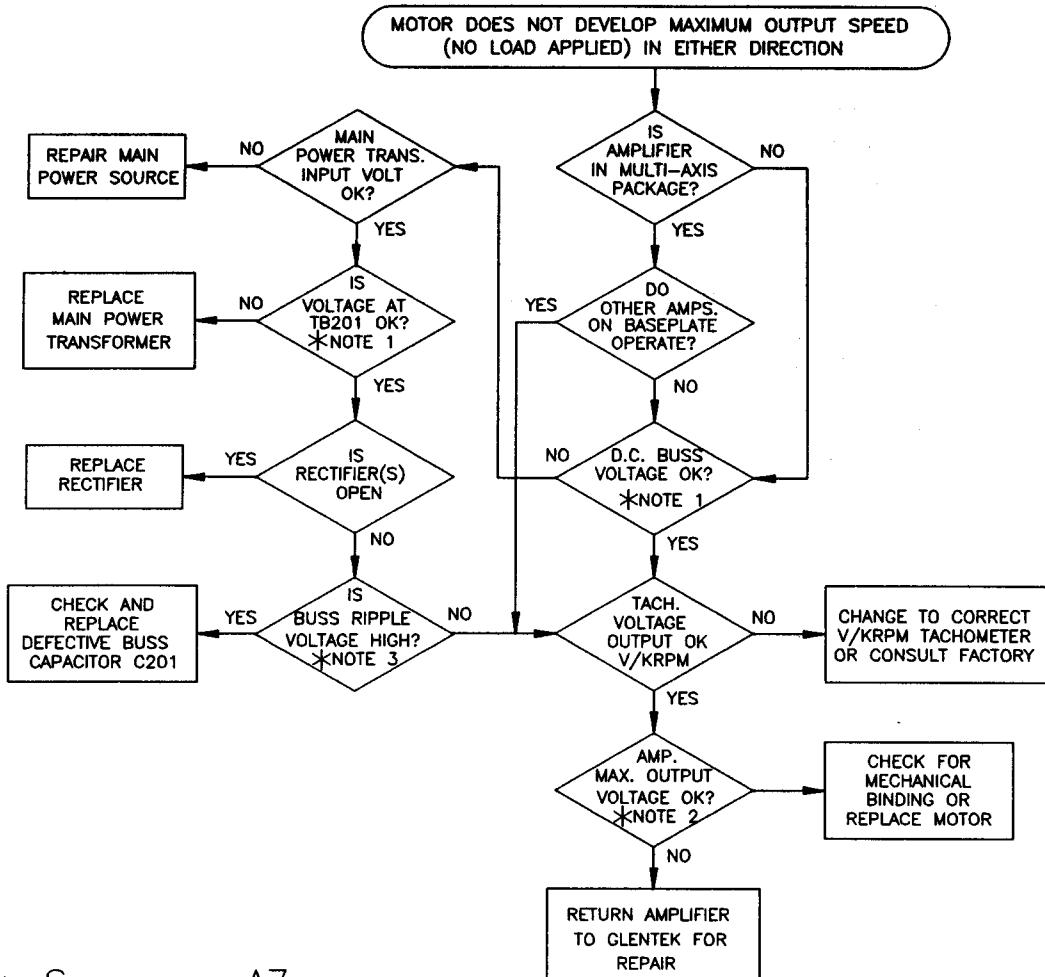


\*-See page A7

**GA4567EPC & GA4568EPB MANUAL**  
**APPENDIX A**

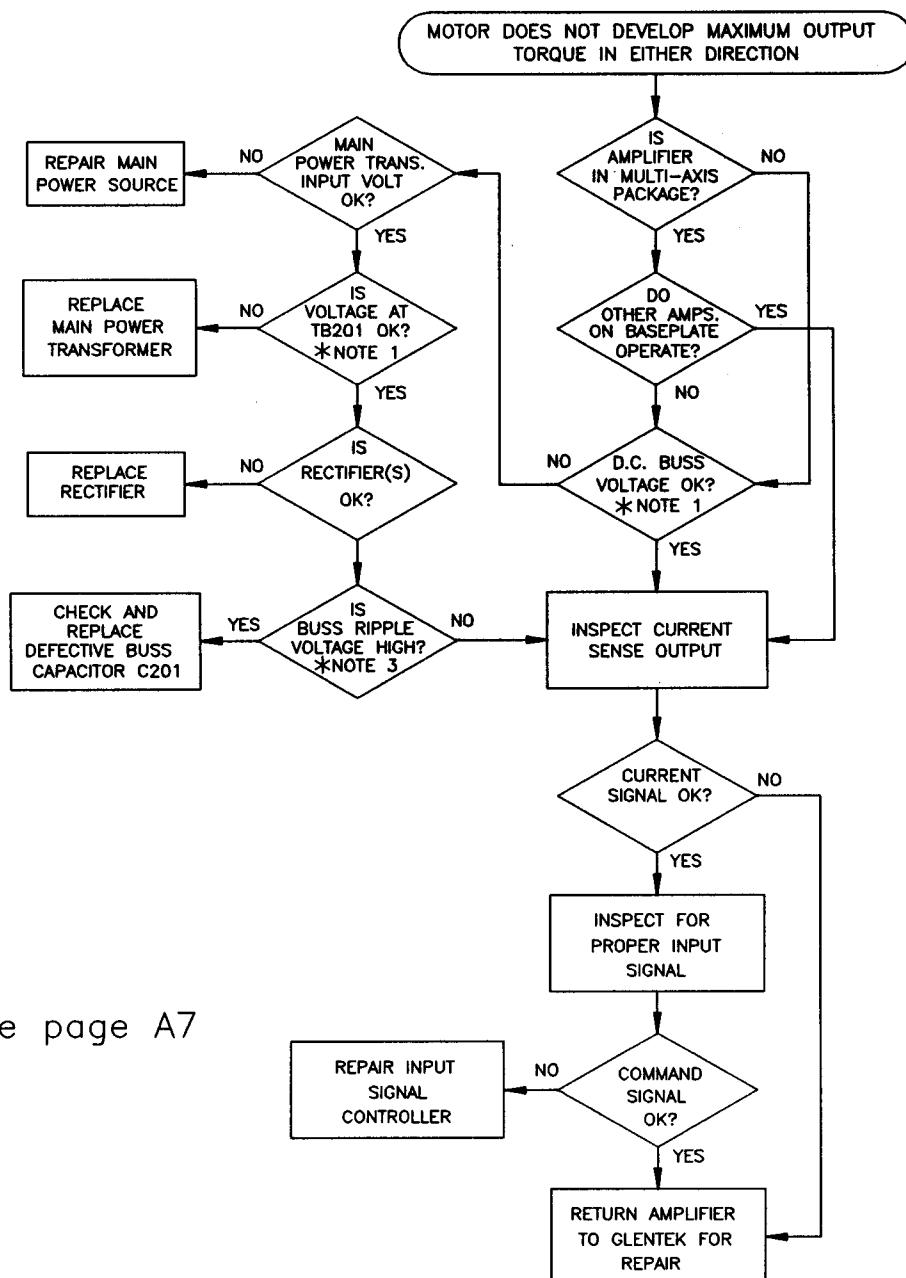

\*-See page A7

**GA4567EPC & GA4568EPB MANUAL  
APPENDIX A**

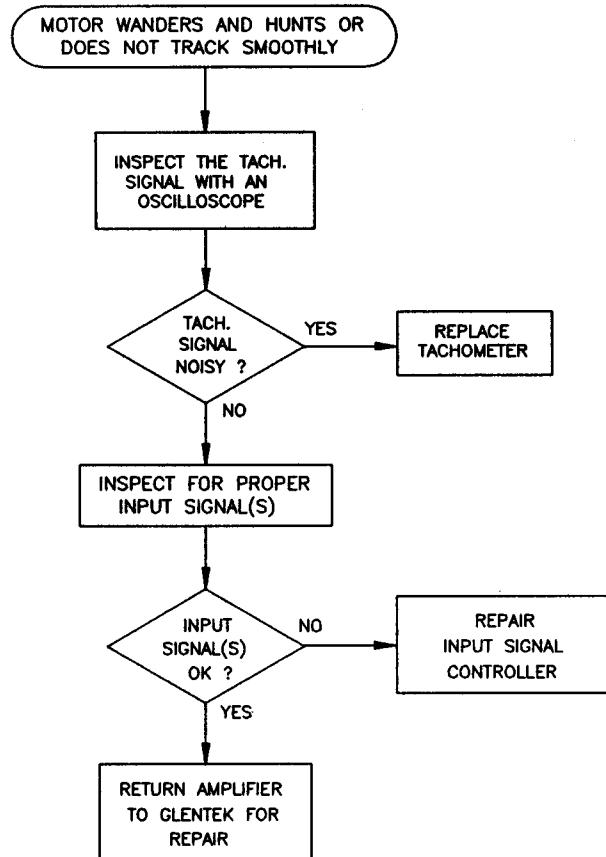

**ENGINEERING NOTES FOR FAULT TRACING CHARTS:**

**NOTE 1:** To measure the DC buss voltage, carefully connect a voltmeter across the bleeder resistor attached to the DC buss filter capacitor. The proper DC buss voltage for your amplifier is calculated by multiplying the AC power input voltage on the main DC buss transformer by 1.4 (e.g. For 70 VAC input you should read  $70 \times 1.4$  or approx. 100 VDC buss voltage). The DC buss voltage will vary depending on if the motor is under a heavy or light load. The DC buss voltage will sag under heavy loads. This is normal for unregulated DC power supplies.

**NOTE 2:** The output voltage to the motor can be checked by alternately applying a positive and then negative voltage to the signal input and observing the voltage swing at the amplifier motor output terminals. Keep in mind that the Loop Gain and Signal potentiometers must be set at least somewhat CW. This test can be made with motor disconnected from amplifier.

**NOTE 3:** A low, but not zero, DC buss voltage could indicate an open or defective DC buss filter capacitor. To check capacitor, remove from circuit and check with an ohmmeter. A visual check of the capacitor port seal could show a blown pressure seal caused by a failed, over-heated capacitor.



**GA4567EPC and GA4568EPB MANUAL**


**APPENDIX B**

**AMPLIFIER DRAWINGS**



**- B1 -**




**GA4567EPC & GA4568EPB MANUAL**  
**APPENDIX B**

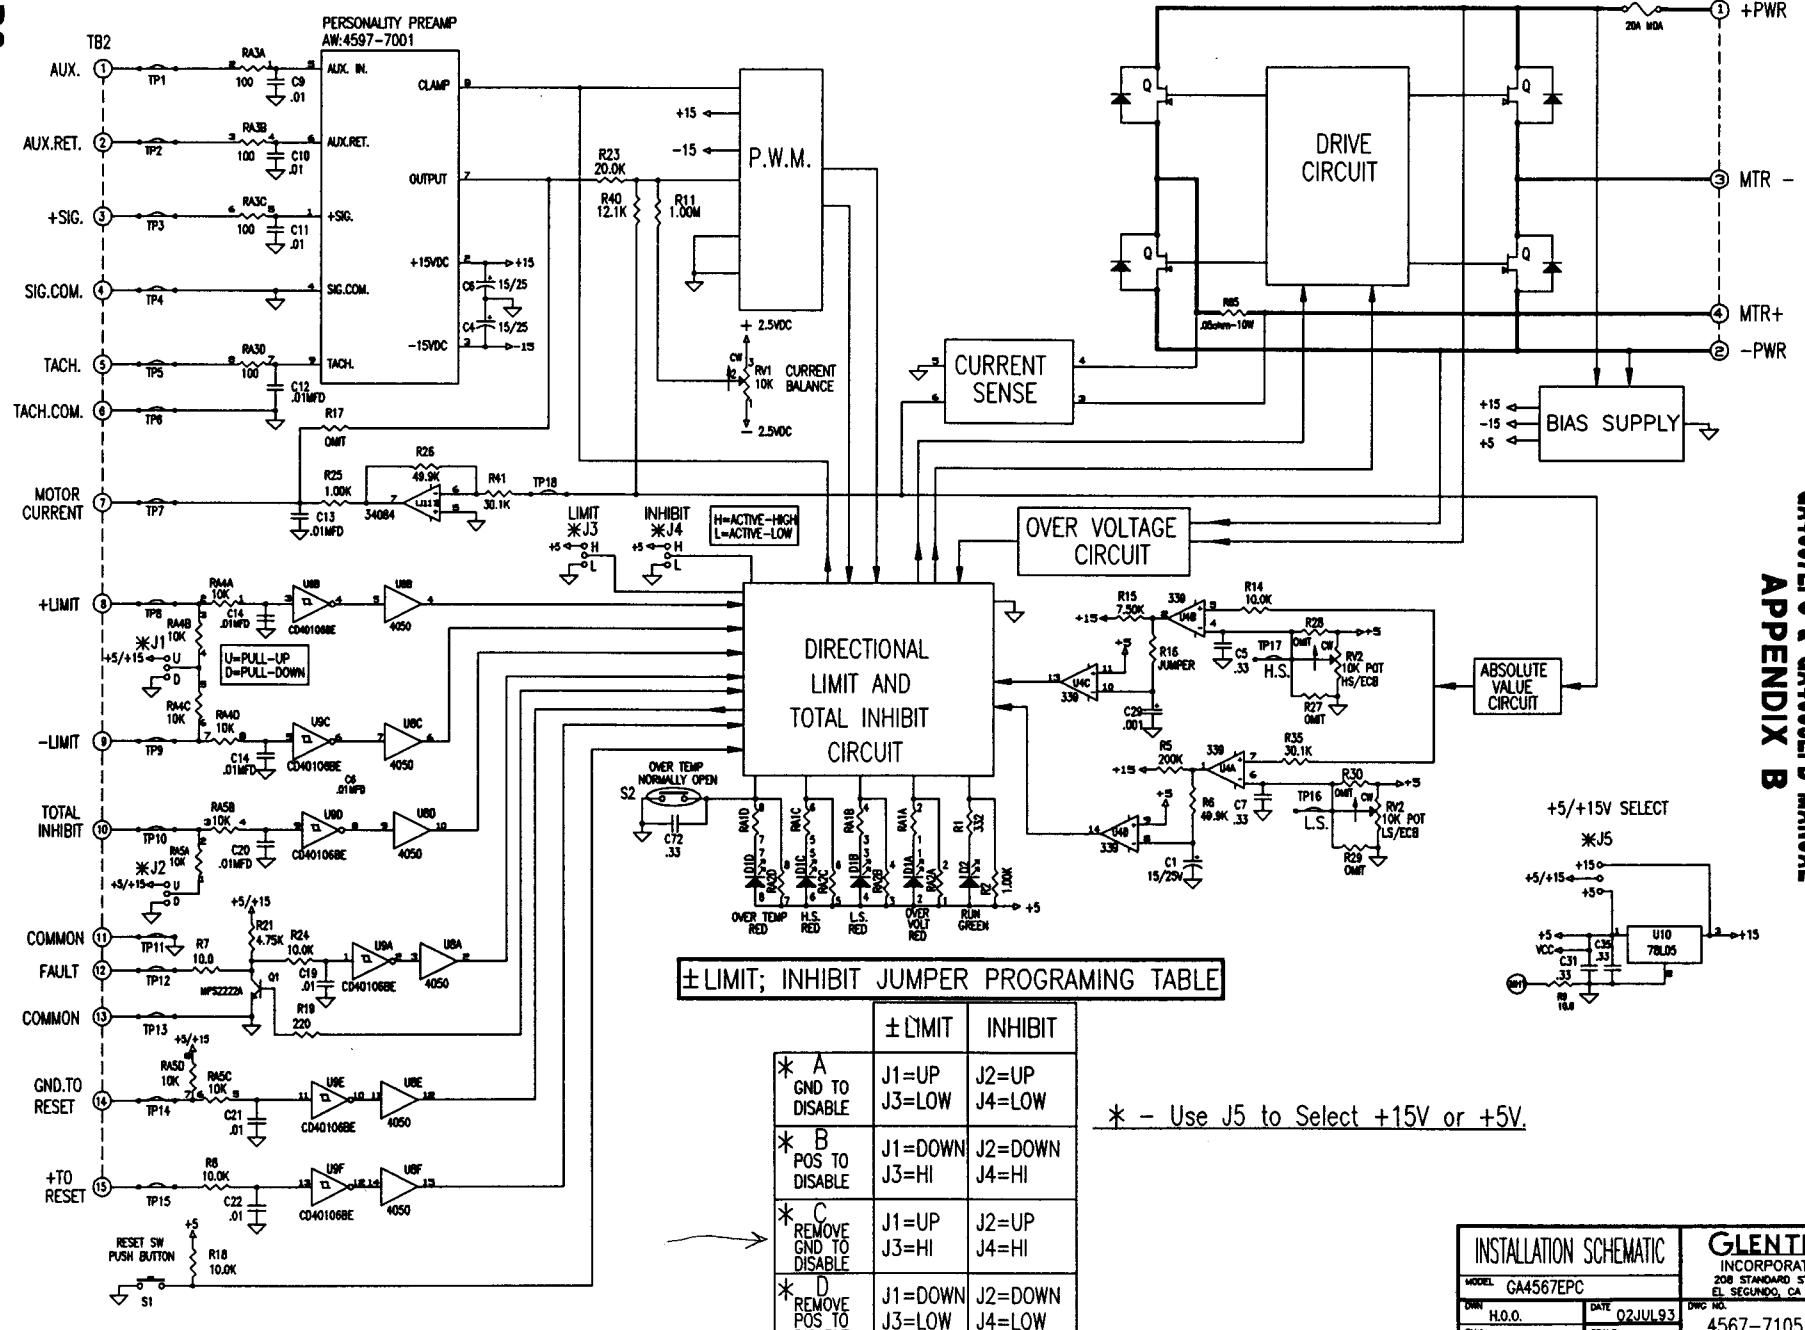

**INSTALLATION SCHEMATIC**


MODEL	INCORPORATED	DATE	REV
GA4567EPC	208 STANDARD STREET EL SEGUNDO, CA 90245	02JUL93	-
DRW H.O.O.	DATE	DRW NO.	REV
DRW T.Y.C.	SCALE	4567-7105	-
APPR R.A.D.	N/A	SHEET 1 OF 1	

**GA4567EPC & GA4568EPB MANUAL**  
**APPENDIX B**

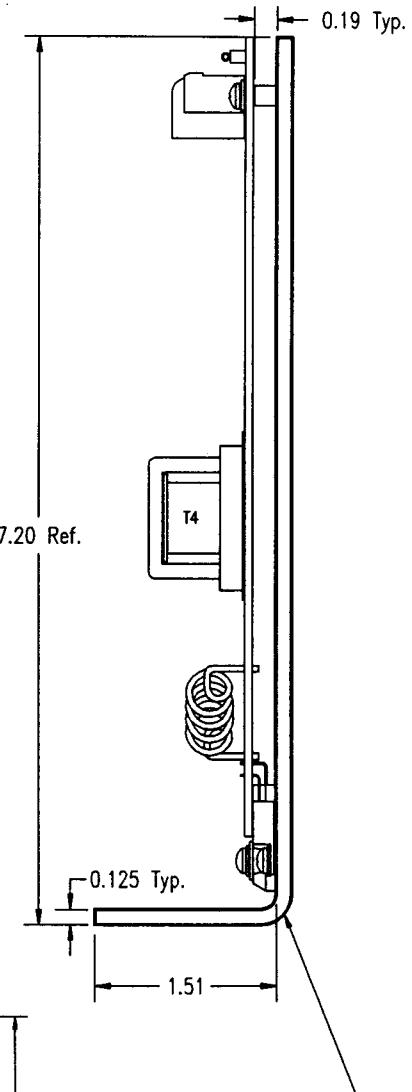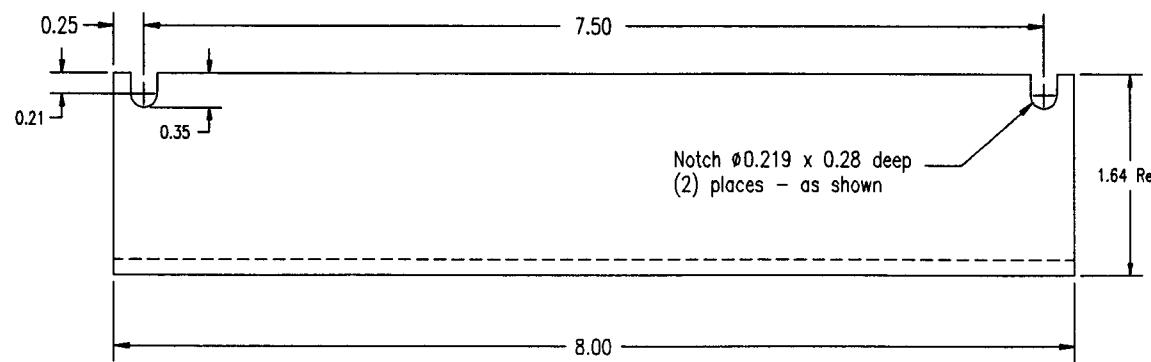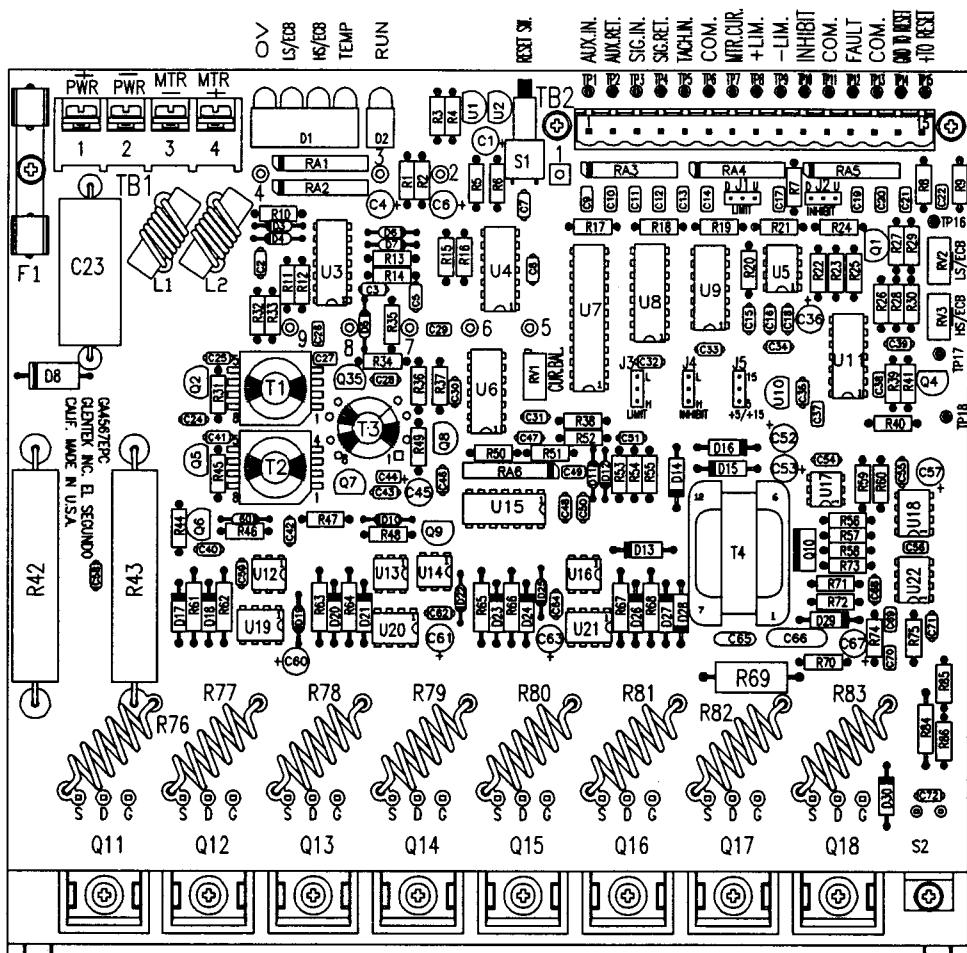

INSTALLATION DRAWING		PWM POWER AMPLIFIER	
REV A		DATE 06MAY93	
DESIGNER H.O.O.	DATE 29SEP92	DRAWING NO. 4567-7106	REV A
CHK TY.C.	SCALE N/A		
APPR R.A.D.		SHEET 1 OF 1	


**GA4567EPC & GA4568EPB MANUAL  
APPENDIX B**

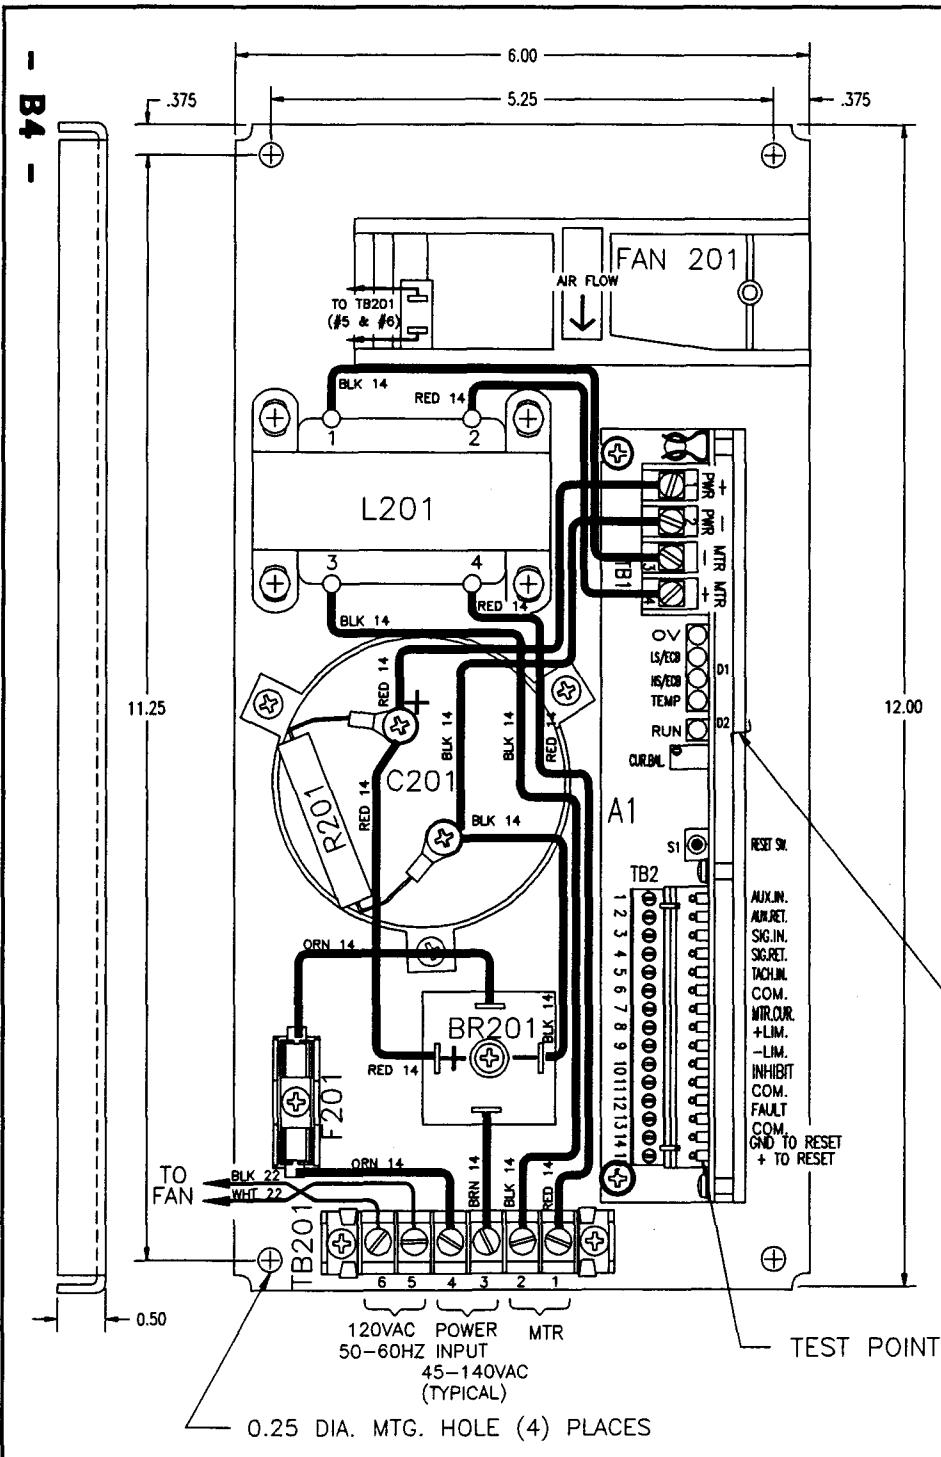

SYM	REV	DATE	APPROVED

**NOTES:**

- 1- NEVER GROUND THE OUTPUTS OF THE AMPLIFIER.
- 2- USE SHIELDED CABLE FOR SIGNAL & TACHOMETER LEADS. CONNECT SHIELD TO SIG. OR TACH. COM.

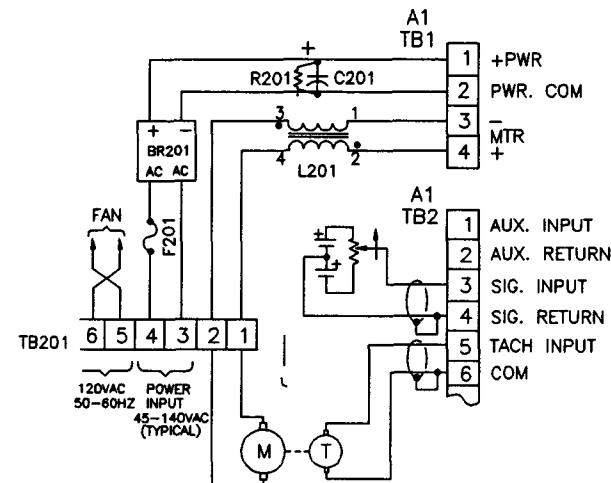

QTY	PART NO.	DESCRIPTION	MATERIAL	ITEM
LIST OF MATERIAL OR PARTS LIST				
1	L201	INDUCTOR, T328		
1	FAN201	FAN 120VAC, 50-60 HERTZ		
1	F201	FUSEHOLDER AND FUSE, 20AMP MDA		
1	R201	RESISTOR, 10K-10W		
1	C201	CAPACITOR, 6000MFD-250VDC		
1	TB201	TERMINAL STRIP, 6PIN		
1	BR201	RECTIFIER MDA2504		
1	A1	AMPLIFIER MODULE, GA4567EPC-1		
1	4560-1008	BASEPLATE		
1 - AXIS INSTALLATION DIAGRAM				
FINISH	H.O.O.	DATE 22SEP93	REV	
	CHK	TY C.	SCALE	
	APPR	R.A.D.	N/A	
SHEET 1 OF 1				


UNLESS OTHERWISE SPECIFIED  
DIMENSIONS ARE IN INCHES  
TOTAL LENGTH: 11.25 INCHES  
FRACTIONAL: 1/16 AVAIL: 1/2  
DECIMALS: 0.005  
TOLERANCE: 0.005  
BREAK SHARP EDGES: 0.005-0.010

1 - AXIS  
INSTALLATION DIAGRAM  
MODEL: GA4567EPC-1A-1


**GLENTEK**  
INCORPORATED  
208 STANDARD STREET  
EL SEGUNDO, CALIF. 90245

4567-7107



**GA4567EPC & GA4568EPB MANUAL**  
**APPENDIX B**

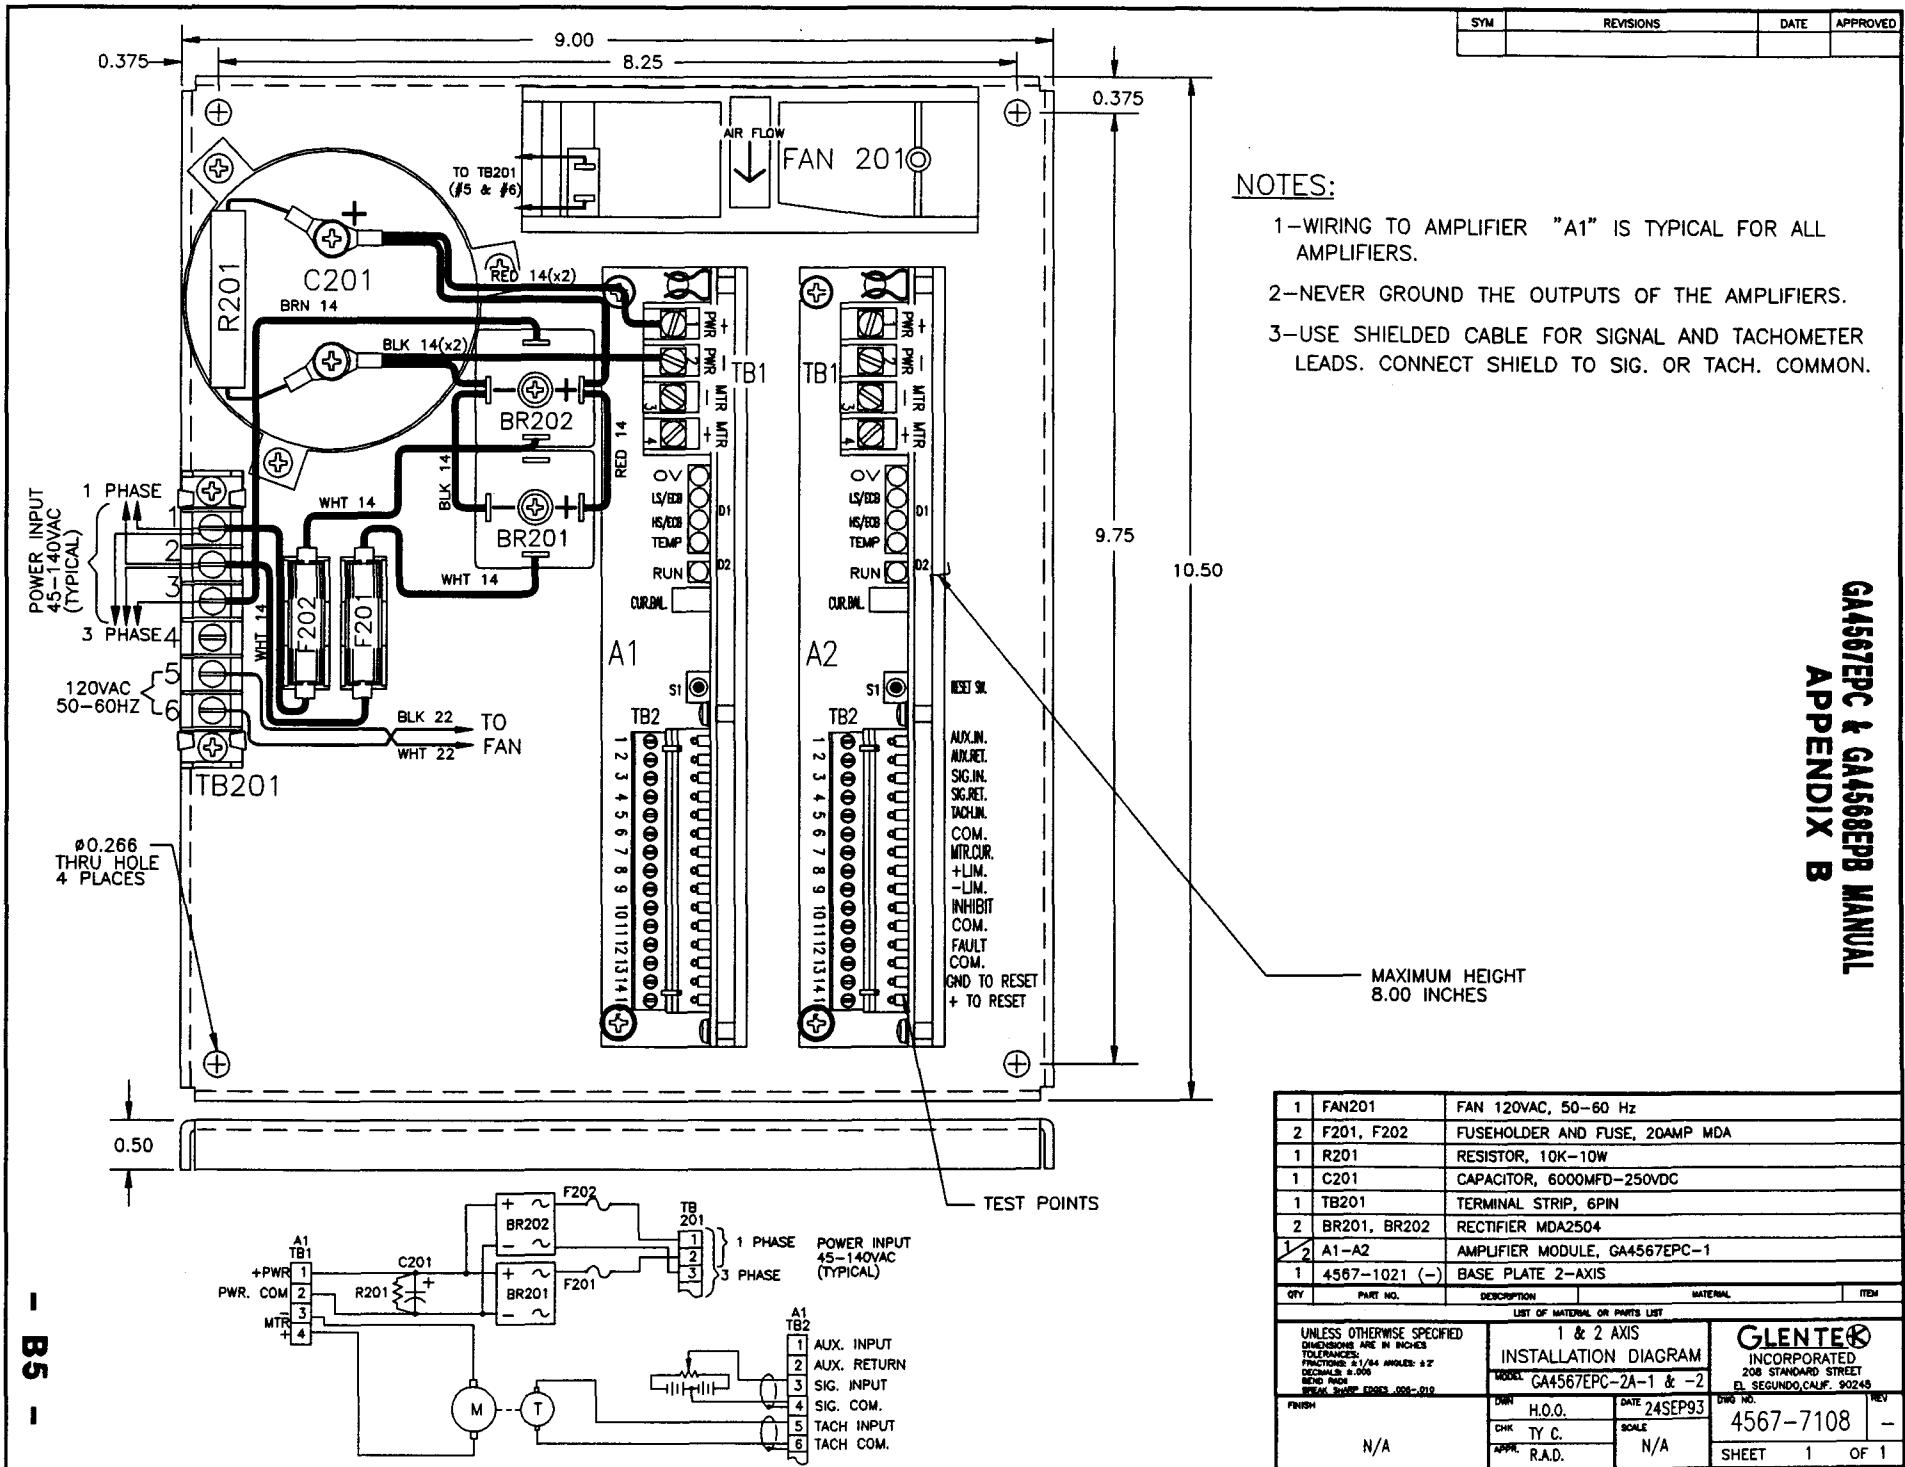

**GA4567EPC & GA4568EPB MANUAL  
APPENDIX B**

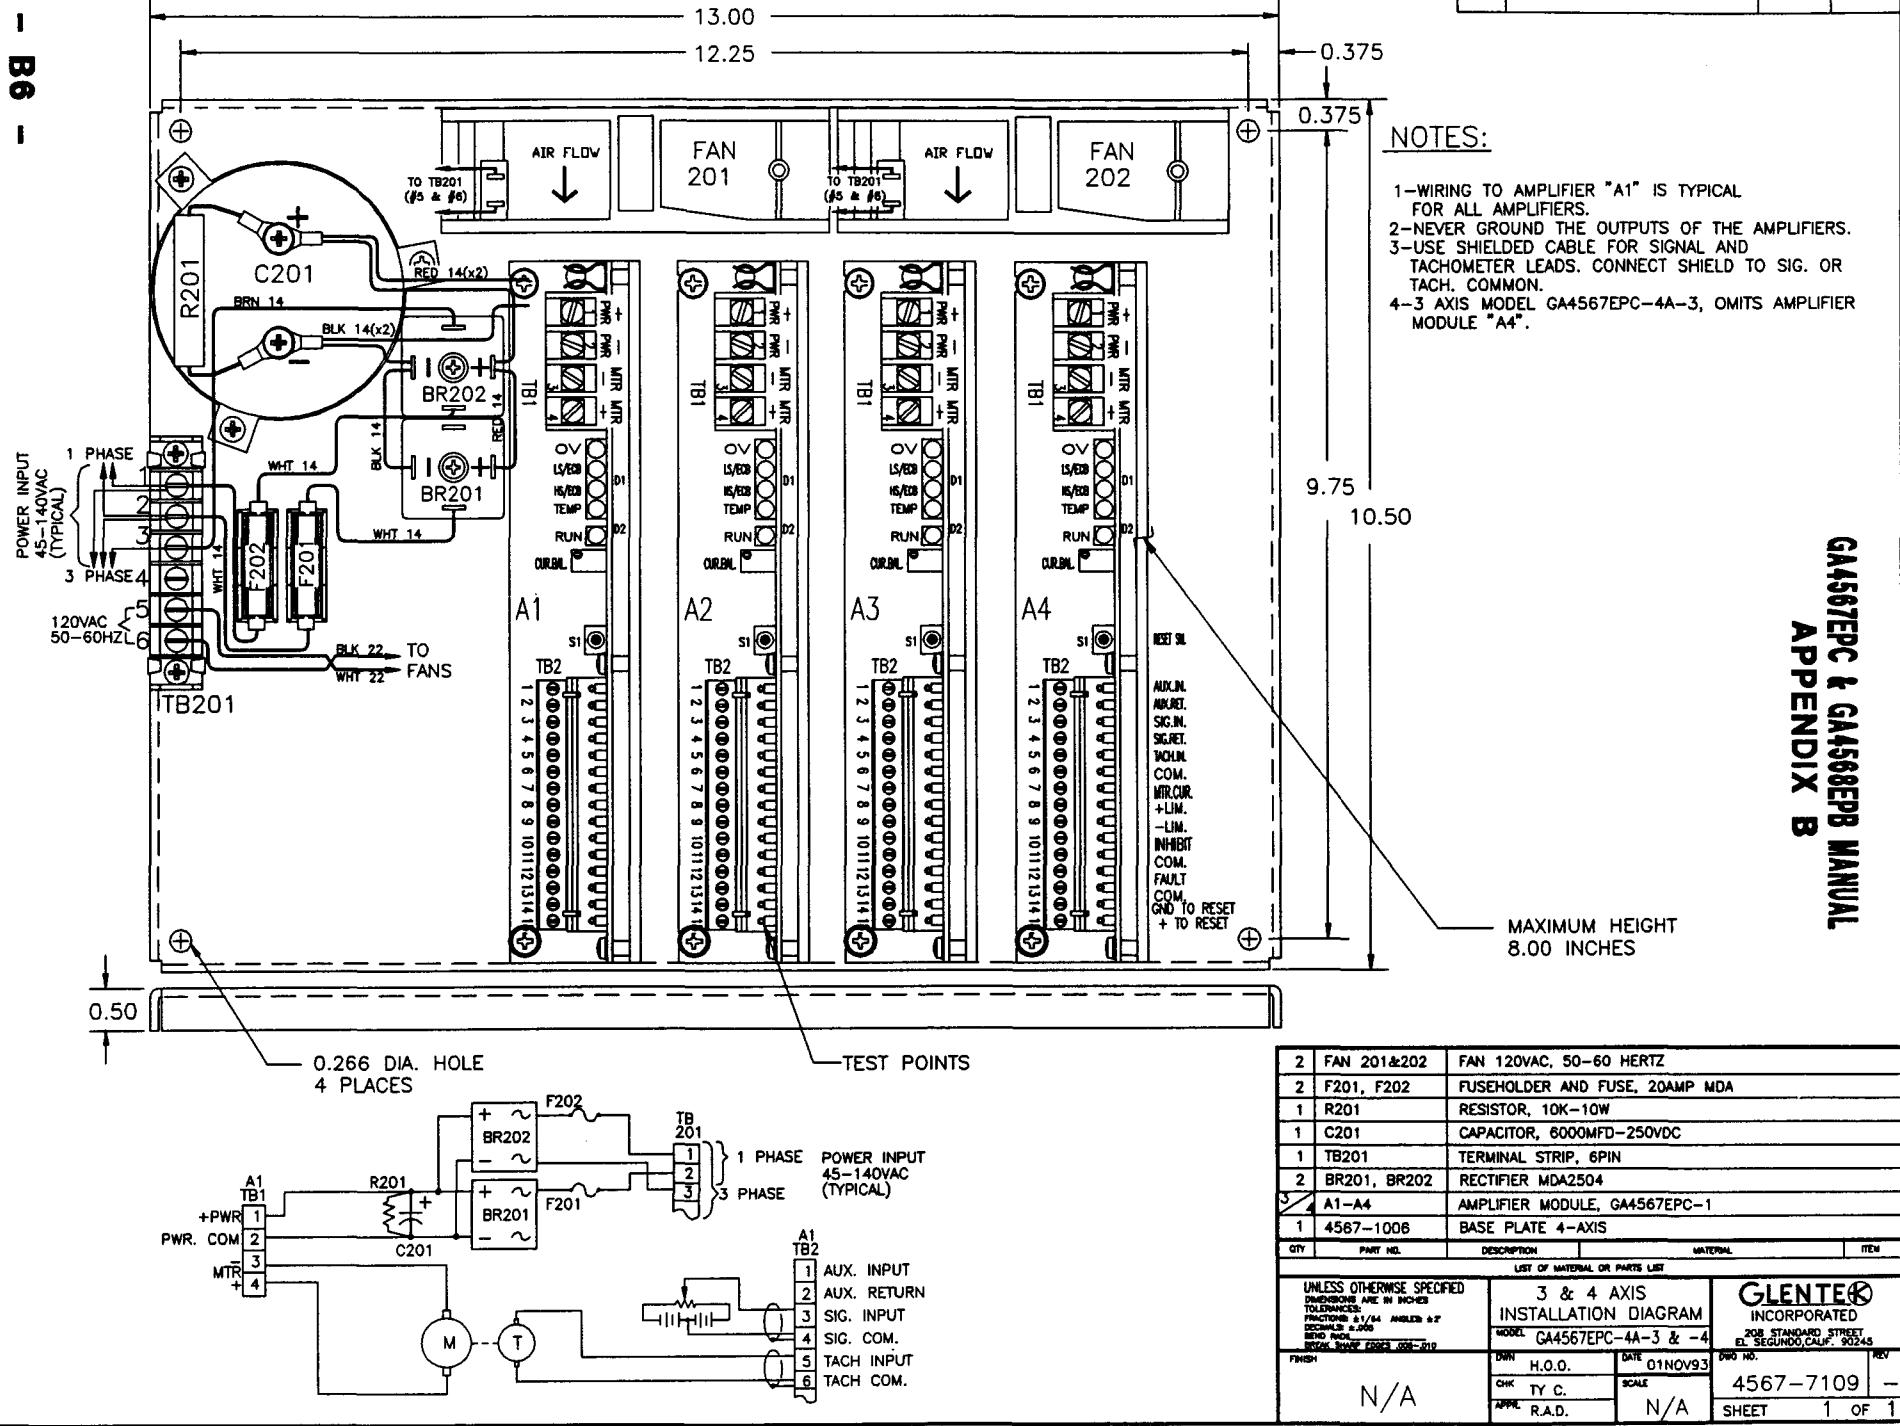


**GA4567EPC & GA4568EPB MANUAL  
APPENDIX B**

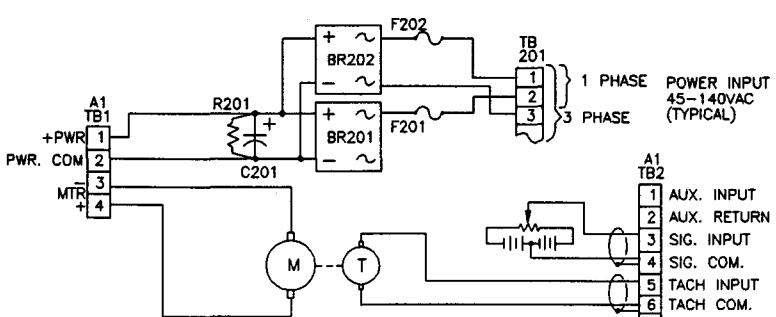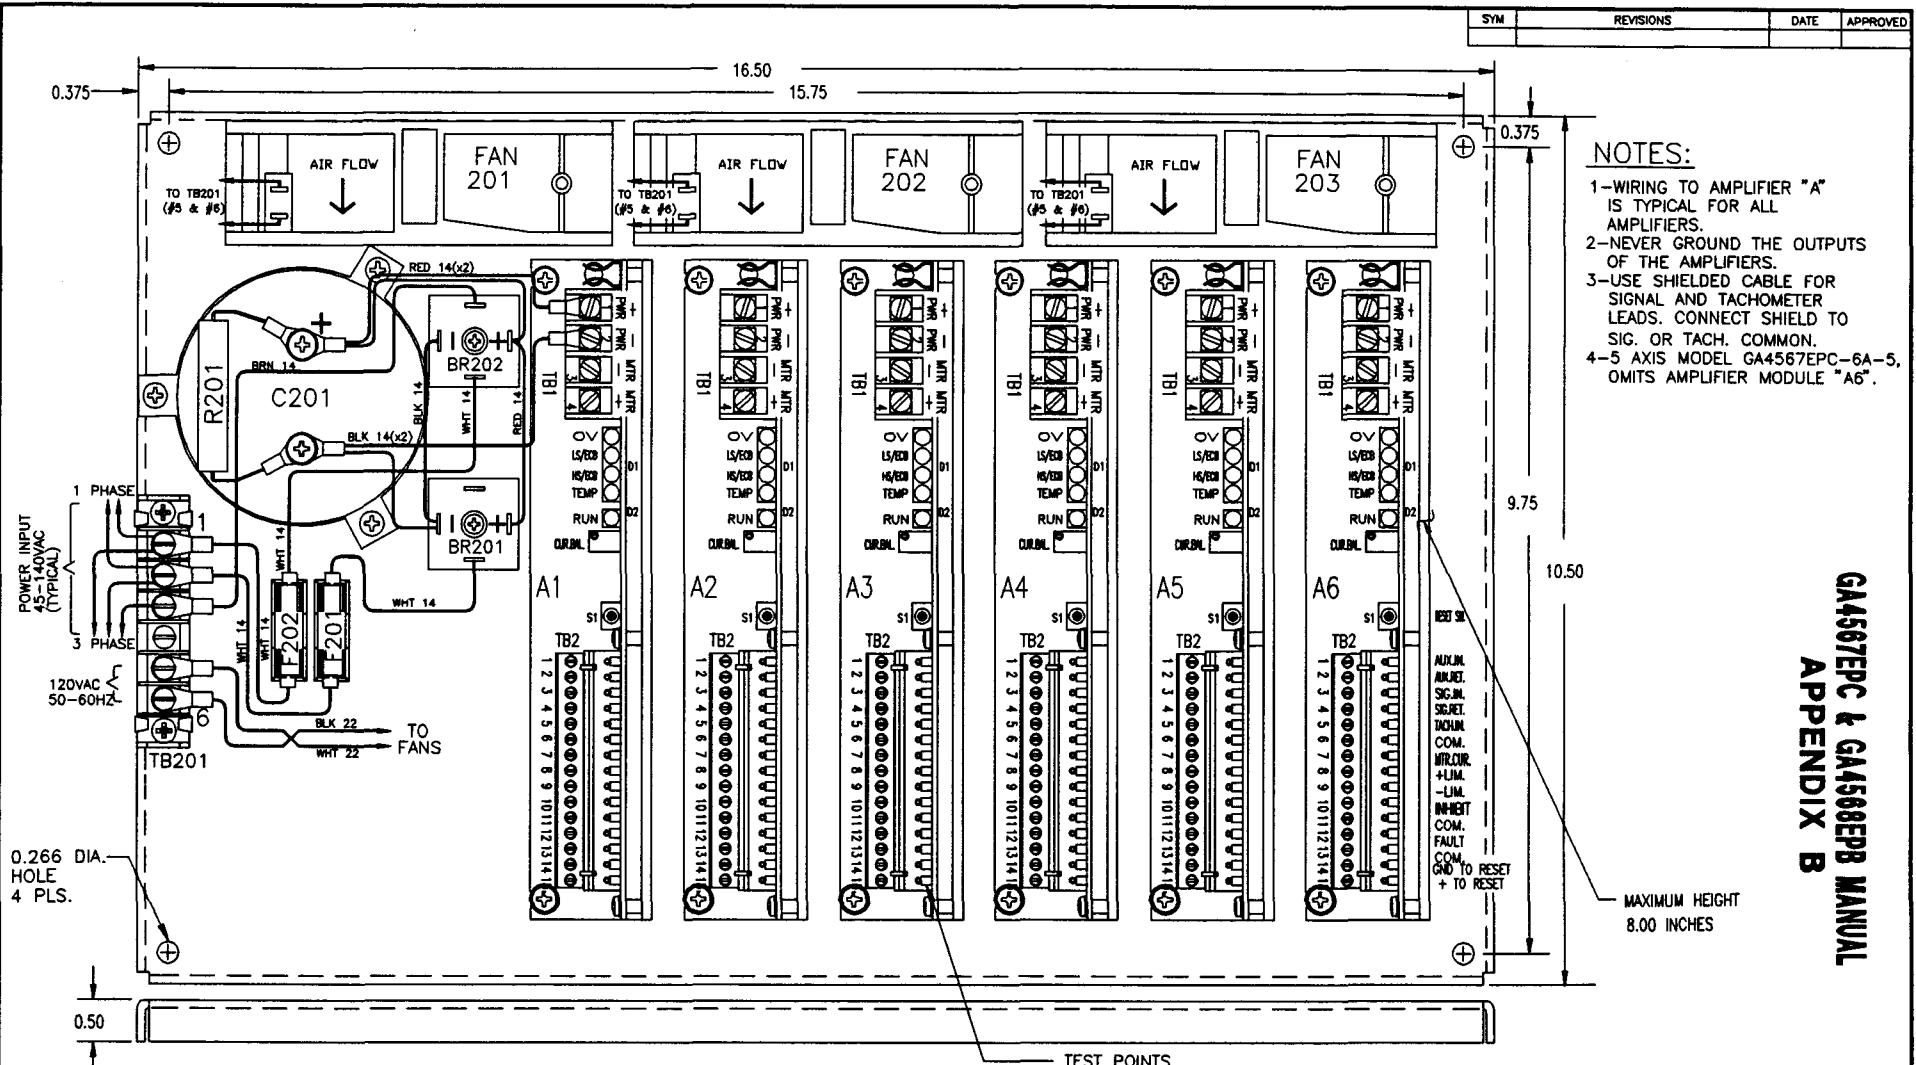


QTY	PART NO.	DESCRIPTION	MATERIAL	ITEM
LIST OF MATERIAL OR PARTS LIST				
3	FAN201-FAN203	FAN 120VAC, 50-60 HERTZ		
2	F201, F202	FUSEHOLDER AND FUSE, 20AMP MDA		
1	R201	RESISTOR, 10K-10W		
1	C201	CAPACITOR, 6000MFD-250VDC		
1	TB201	TERMINAL STRIP, 6PIN		
2	BR201-BR202	RECTIFIER MDA2504		
5-6	A1-A6	AMPLIFIER MODULE, GA4567EPC-1		
1	4567-1022 (-)	BASE PLATE 6-AXIS		
UNLESS OTHERWISE SPECIFIED DIMENSIONS ARE IN INCHES TOLERANCES PITCH = .0625, 1/4" ANGLE ±2° DEGRADS ±2.000 BEND RADIUS = .250 SHARP EDGES = .005-.010				
5 & 6 AXIS INSTALLATION DIAGRAM				
MODEL GA4567EPC-6A-5 & -6				
FINISH				
N/A				
H.O.O. 02NOV93				
CHK TY. C. N/A				
APPL. R.A.D. N/A				
SHEET 1 OF 1				

四  
〇


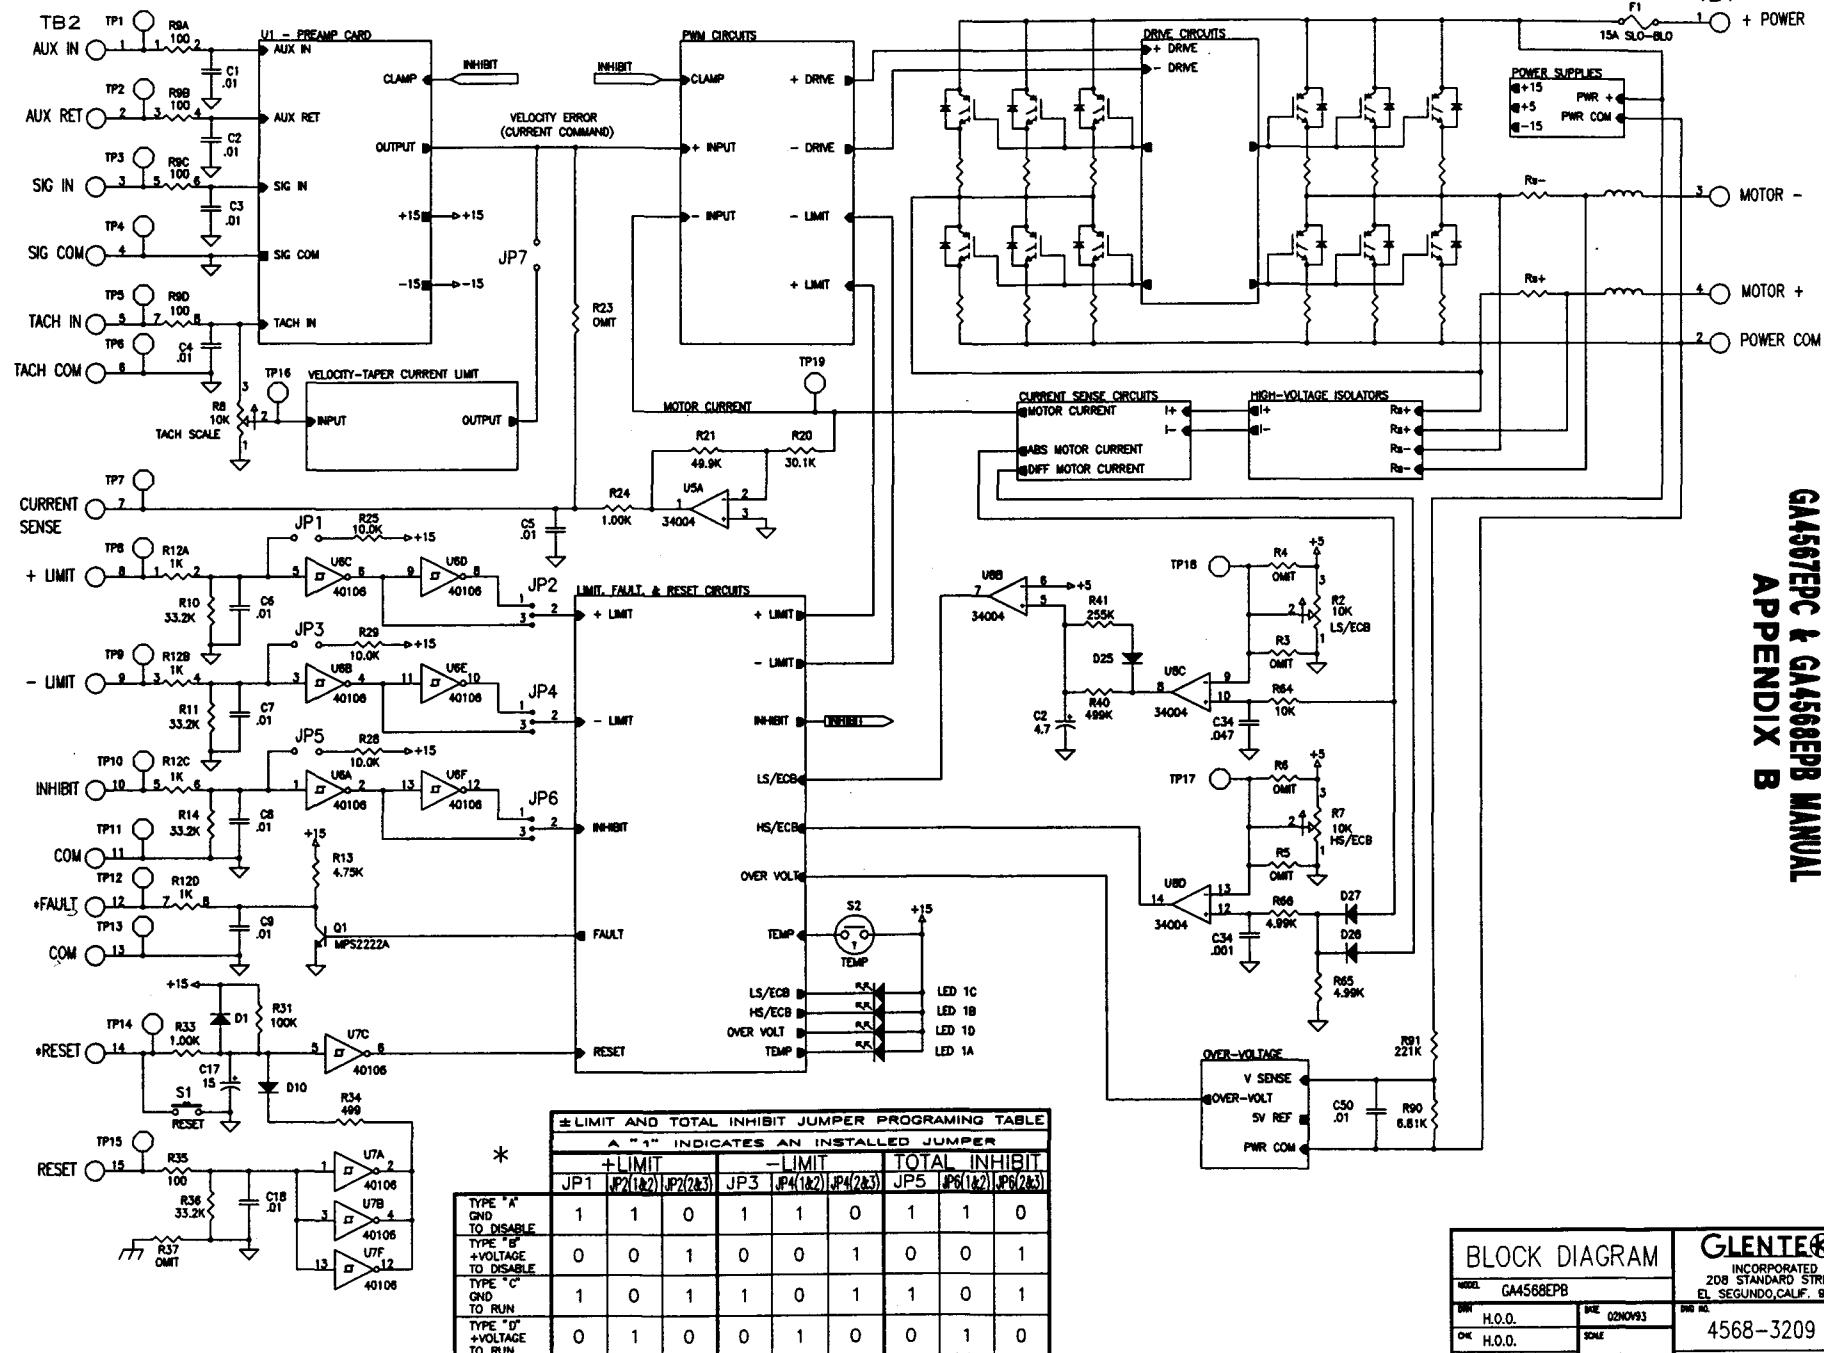


## **GA4567EPC & GA4568EPB MANUAL APPENDIX B**


± LIMIT AND TOTAL INHIBIT JUMPER PROGRAMMING TABLE									
A "1" INDICATES AN INSTALLED JUMPER									
	+LIMIT		-LIMIT		TOTAL INHIBIT				
	JP1	(JP1(1&2))	JP2(1&3)	JP3	(JP4(1&2))	(JP4(1&3))	JP5	(JP6(1&2))	(JP6(1&3))
TYPE "A" GND TO DISABLE	1	1	0	1	1	0	1	1	0
TYPE "B" +VOLTAGE TO DISABLE	0	0	1	0	0	1	0	0	1
TYPE "C" GND TO RUN	1	0	1	1	0	1	1	0	1
TYPE "D" +VOLTAGE TO RUN	0	1	0	0	1	0	0	1	0

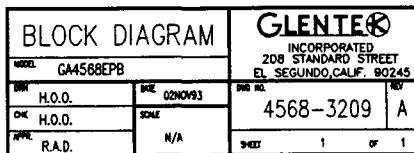

## **GA4567EPC & GA4568EPB MANUAL APPENDIX B**

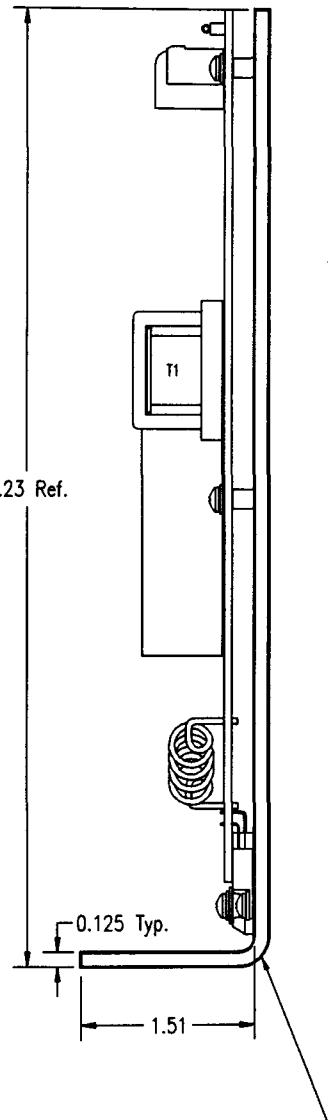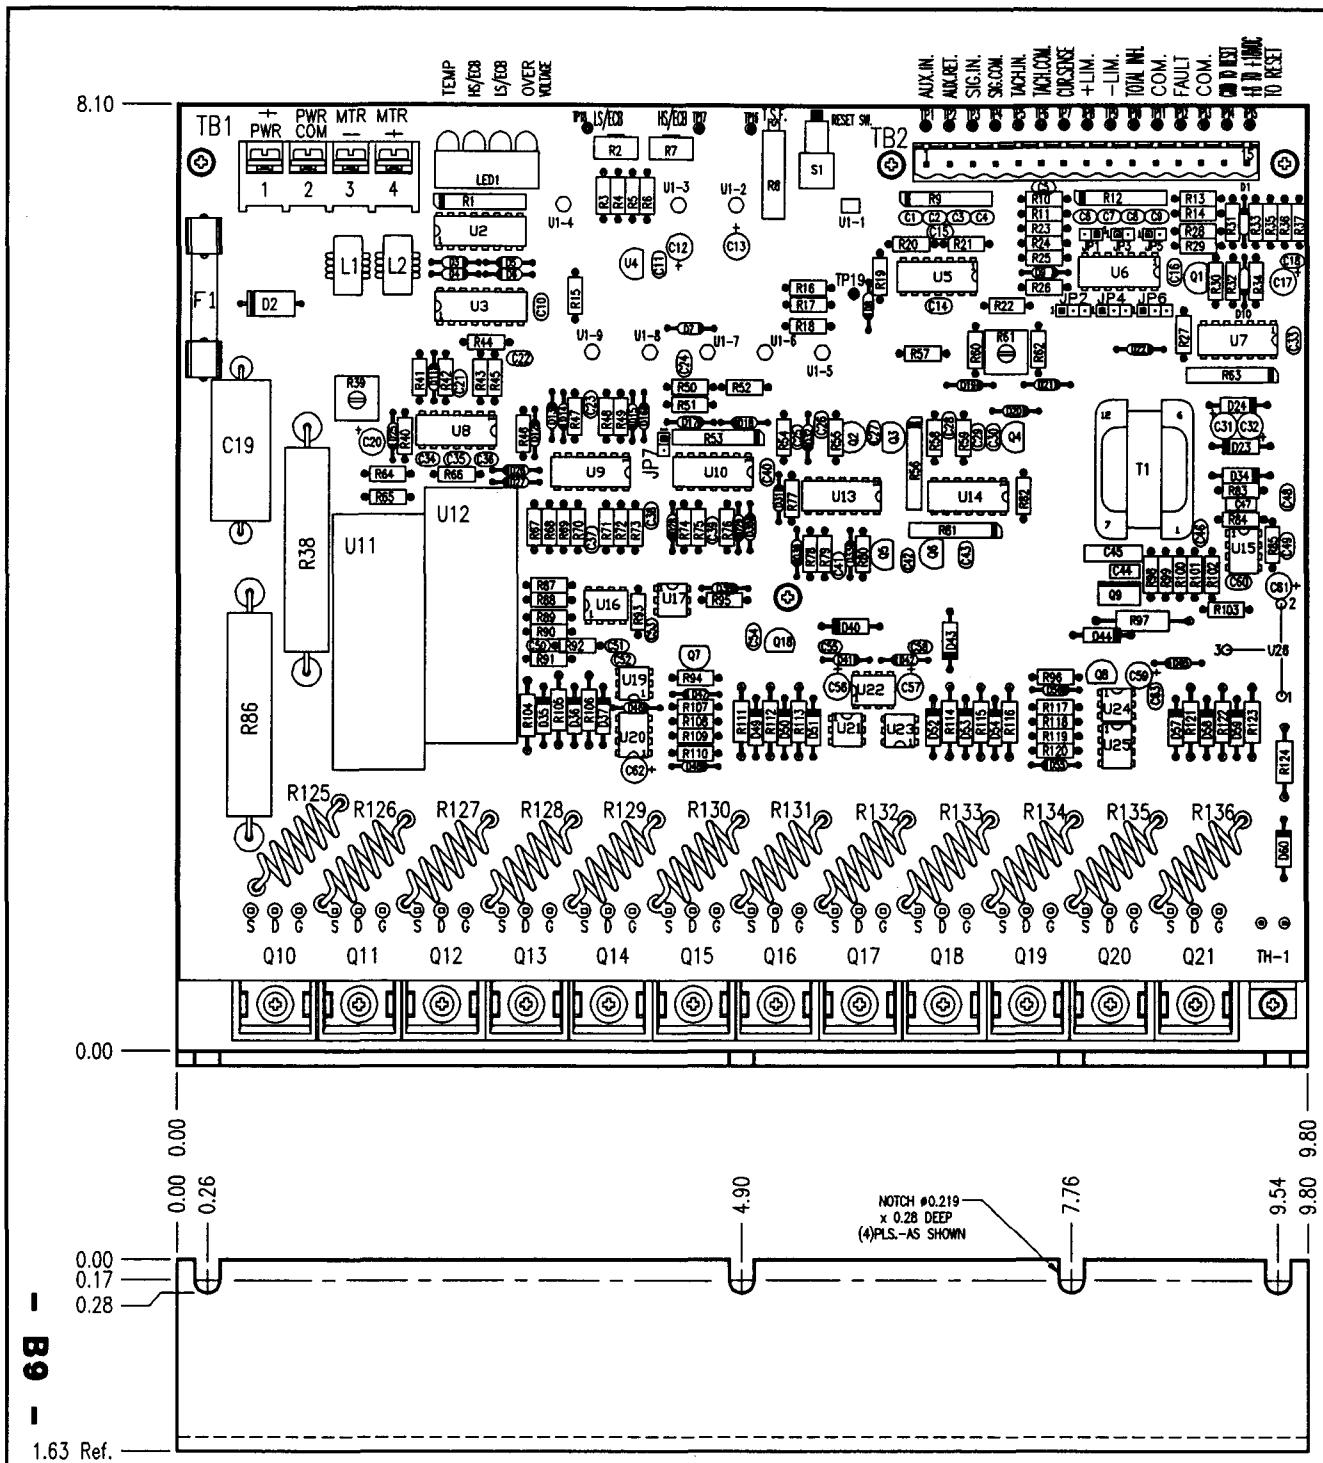


INSTALLATION DIAGRAM		GLENTEK	
PWM POWER AMPLIFIER		INCORPORATED 208 STANDARD STREET EL SEGUNDO, CALIF. 90245	
MODEL	GA4568EPB-1		
DNO	H.O.D.	DATE 18DEC91	
CHCK	TY C.	SOLE	
APPL	R.A.D.	N/A	
		DNO	REV
		4568-3210	
		SHEET 1 OF 1	

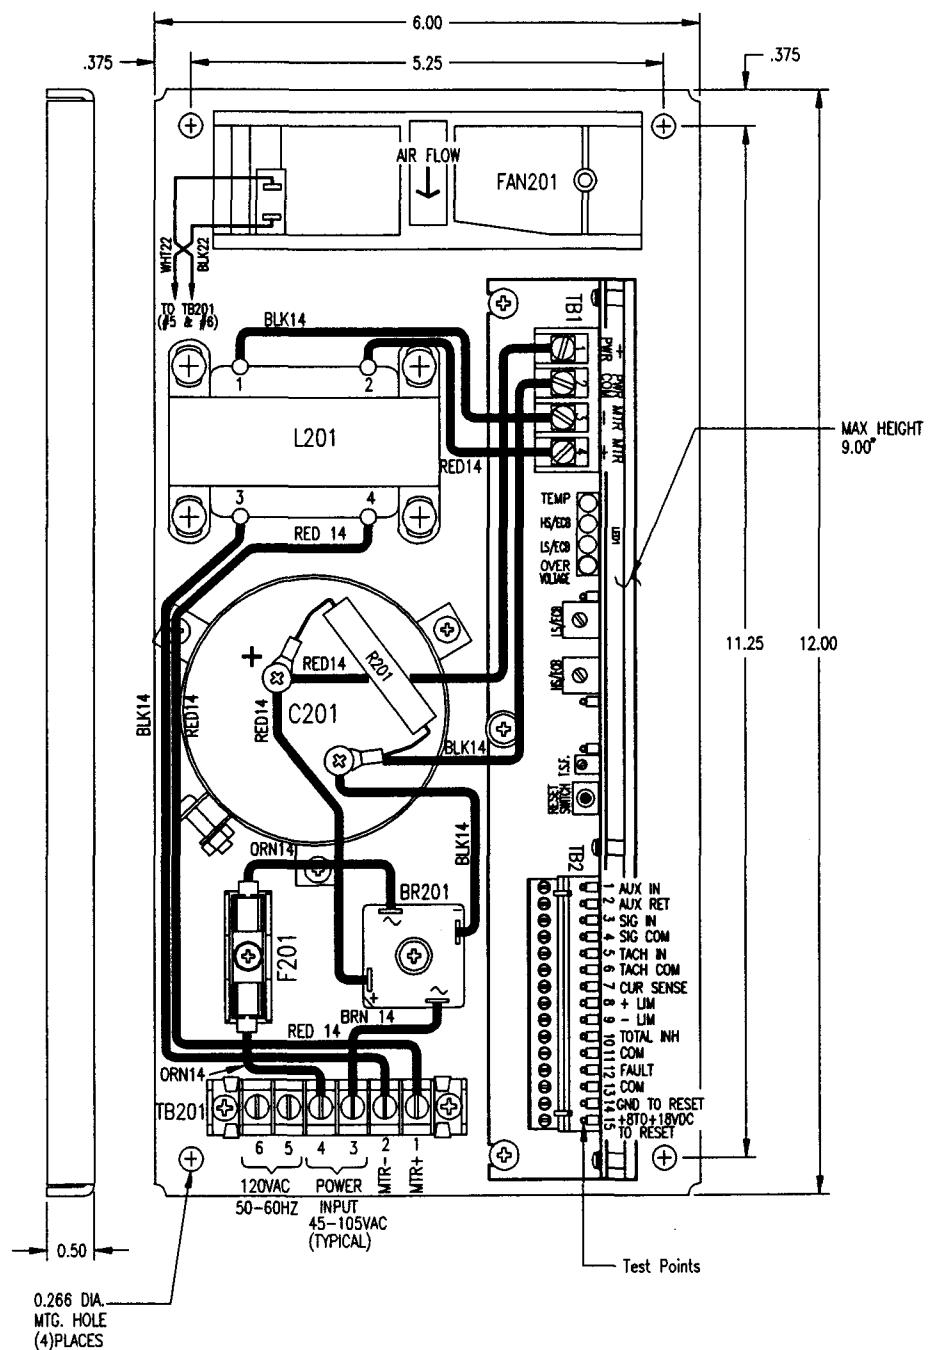

NOTES:

- 1-NEVER GROUND THE OUTPUTS OF THE AMPLIFIER.
- 2-USE SHIELDED CABLE FOR SIGNAL AND TACHOMETER LEADS. CONNECT SHIELD TO SIGNAL AND TACHOMETER COMMON.

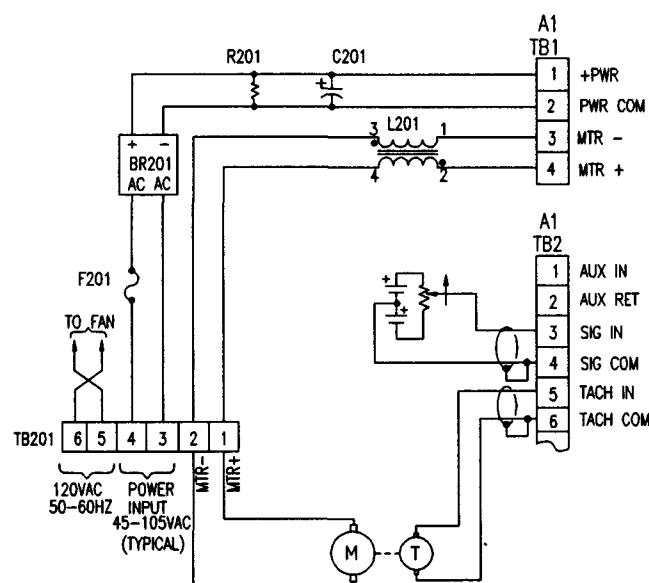

## **GA4567EPC & GA4568EPB MANUAL APPENDIX B**

1	L201	INDUCTOR, T328	9
1	FAN201	FAN 120VAC, 50-60Hz	8
1	F201	FUSEHOLDER AND FUSE, 15AMP SLO	7
1	R201	RESISTOR, 3K-10W	6
1	C201	CAPACITOR, B700MF-150VDC, MAX. SURGE 175VDC	5
1	TB201	TERMINAL STRIP, 6PIN	4
1	BR201	RECTIFIER 35MB40A	3
1	A1	AMPLIFIER MODULE, GA4568EPB-1	2
1	4568-3110	1-AXIS BASEPLATE	1
ITEM	NAME, NO.	DESCRIPTION	ITEM

UNLESS OTHERWISE SPECIFIED  
DIMENSIONS ARE IN INCHES  
TOLERANCES:  
FRACTIONS  $\pm 1/64$  ANGLES  $\pm 2^\circ$   
DECIMALS  $\pm .006$   
BEND RADIi  
BREAK SHARP EDGES .006-.010

## 1-AXIS INSTALLATION DIAGRAM

MODEL GA4568EPB-1A


**GLENTEK**  
INCORPORATED  
208 STANDARD STREET  
EL SEGUNDO, CALIF. 90245



4568-3205

SHEET 1 OF

111

GA4567EP & GA4568EPB MANUAL  
APPENDIX B

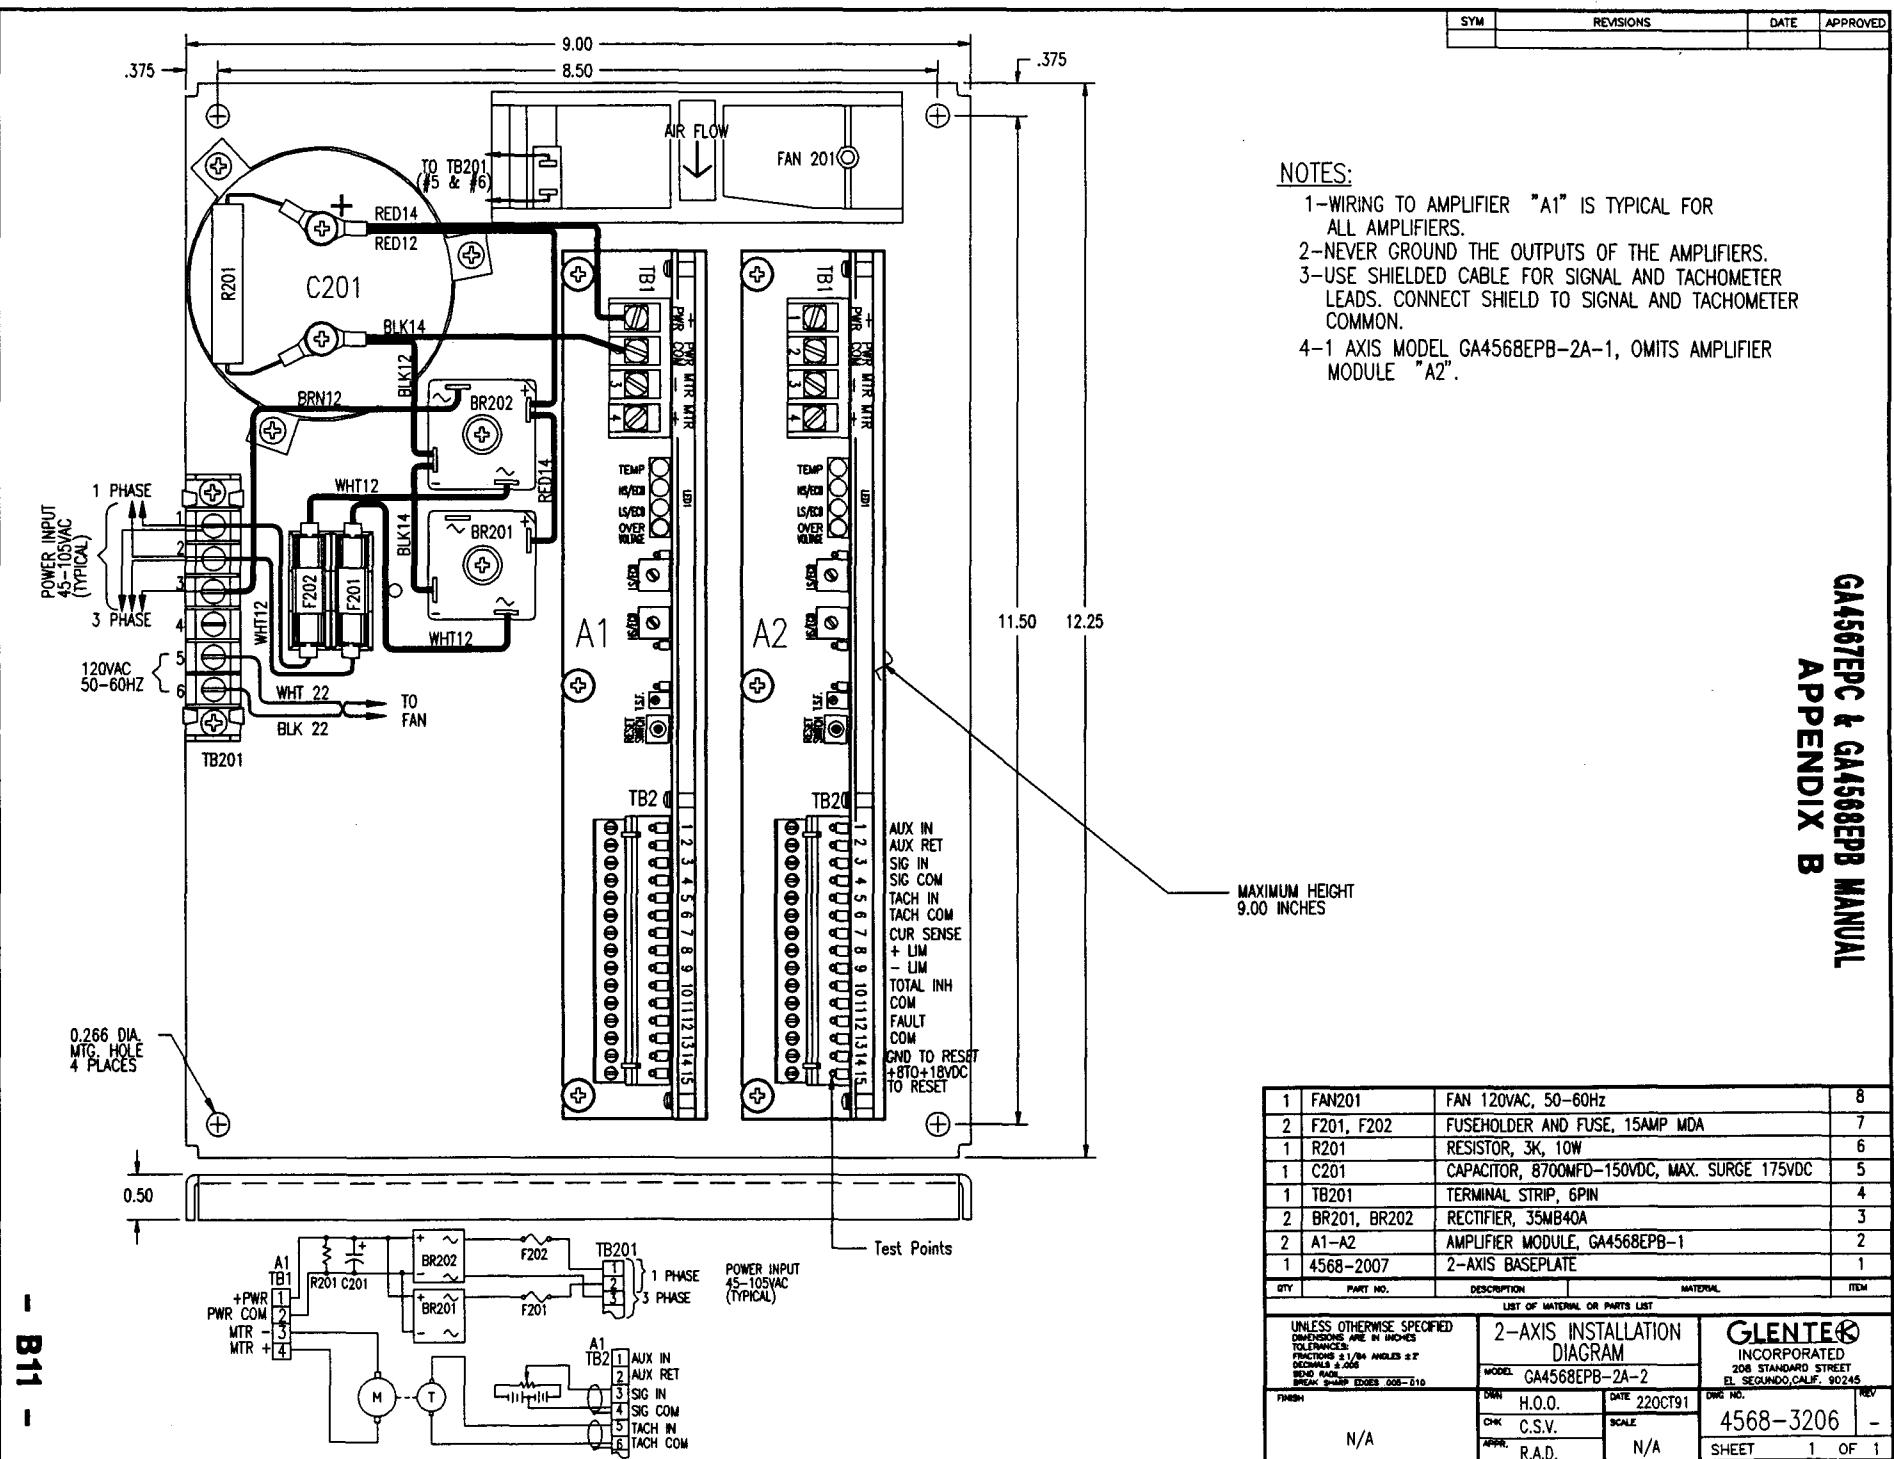

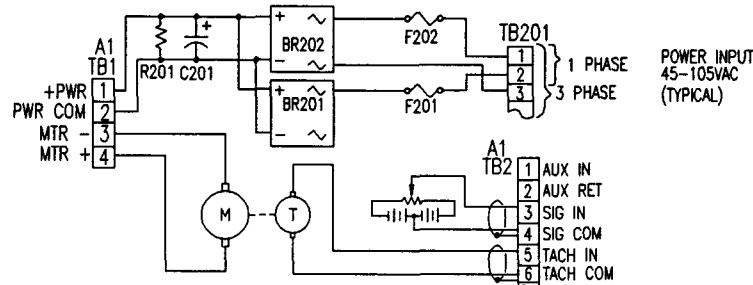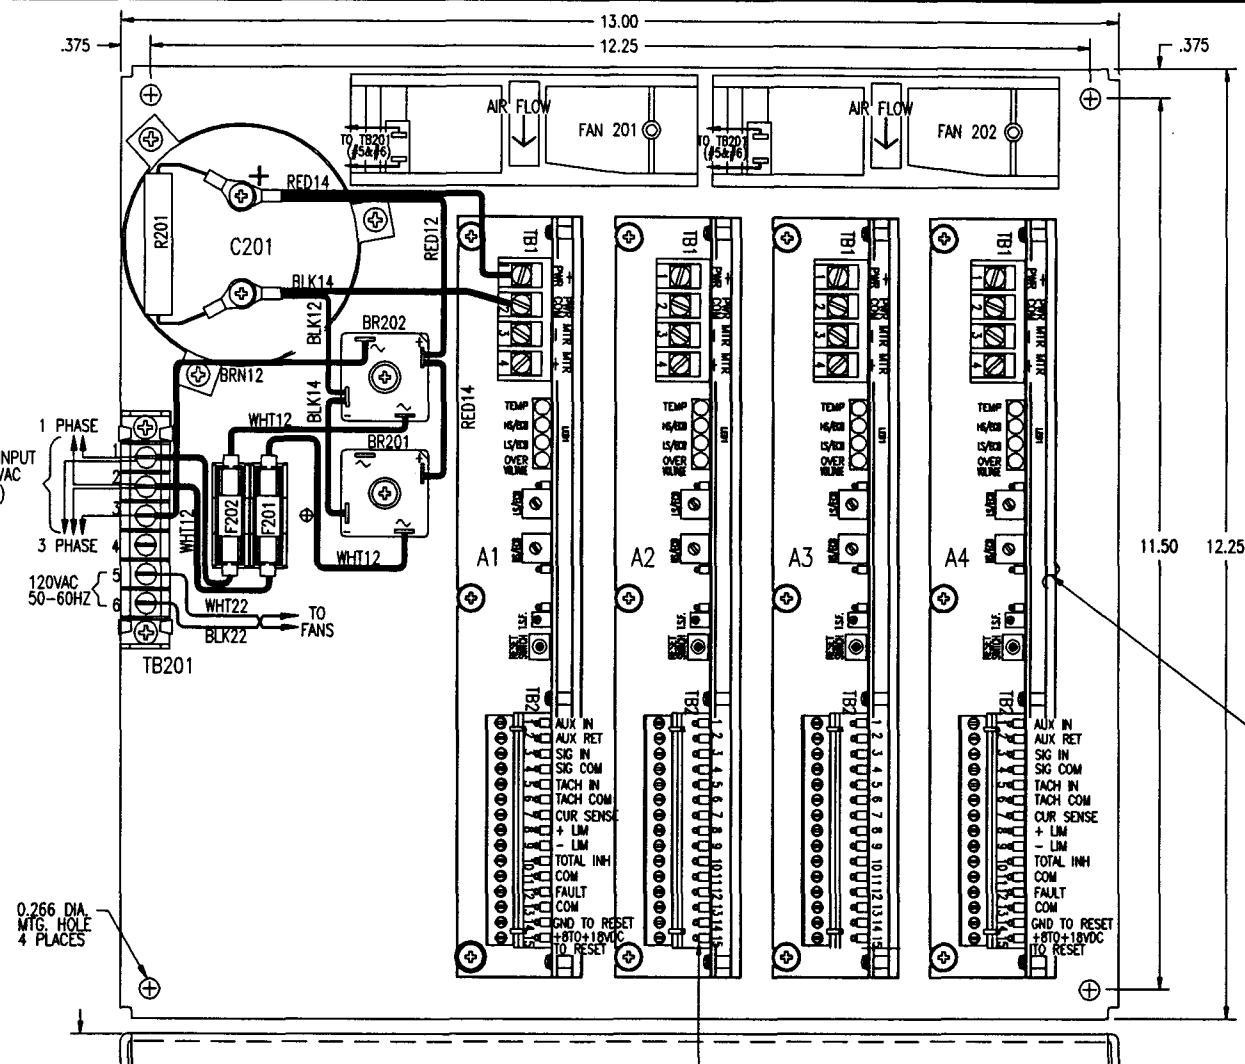

## NOTES:

- 1-WIRING TO AMPLIFIER "A1" IS TYPICAL FOR ALL AMPLIFIERS.
- 2-NEVER GROUND THE OUTPUTS OF THE AMPLIFIERS.
- 3-USE SHIELDED CABLE FOR SIGNAL AND TACHOMETER LEADS. CONNECT SHIELD TO SIGNAL AND TACHOMETER COMMON.
- 4-3-AXIS MODEL GA4568EPB-4A-3, OMITS AMPLIFIER MODULE "A4".



**GA4567EPC & GA4568EPB MANUAL**  
**APPENDIX B**

QTY	PART NO.	DESCRIPTION	MATERIAL	ITEM
LIST OF MATERIAL OR PARTS LIST				
2	FAN201-FAN202	FAN, 120VAC, 50-60Hz		8
2	F201-F202	FUSEHOLDER AND FUSE, 20AMP MDA		7
1	R201	RESISTOR, 3K-10W		6
1	C201	CAPACITOR, 8700MF-150VDC, MAX. SURGE 175VDC		5
1	TB201	TERMINAL STRIP, 6PIN		4
2	BR201-BR202	RECTIFIER 35MB40A		3
4	A1-A4	AMPLIFIER MODULE, GA4568EPB-1		2
1	4568-2008	BASEPLATE		1

4-AXIS INSTALLATION DIAGRAM			REV
MODEL GA4568EPB-4A-4		N/A	
FINISH	H.O.O.	DATE 230CT91	Dwg. No.
C.M.C.	C.S.V.	SCALE	4568-3207
APPL.	R.A.D.	N/A	SHEET 1 OF 1

**GLENTEK**  
INCORPORATED  
208 STANDARD STREET  
EL SEGUNDO, CALIF. 90245

**GA4567EPC & GA4568EPB MANUAL**  
**APPENDIX B**

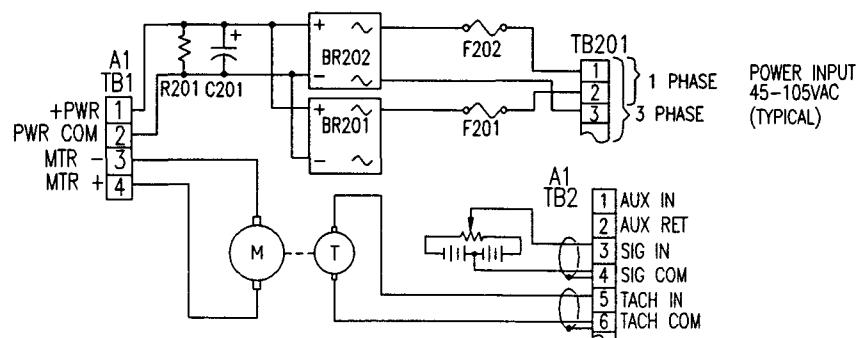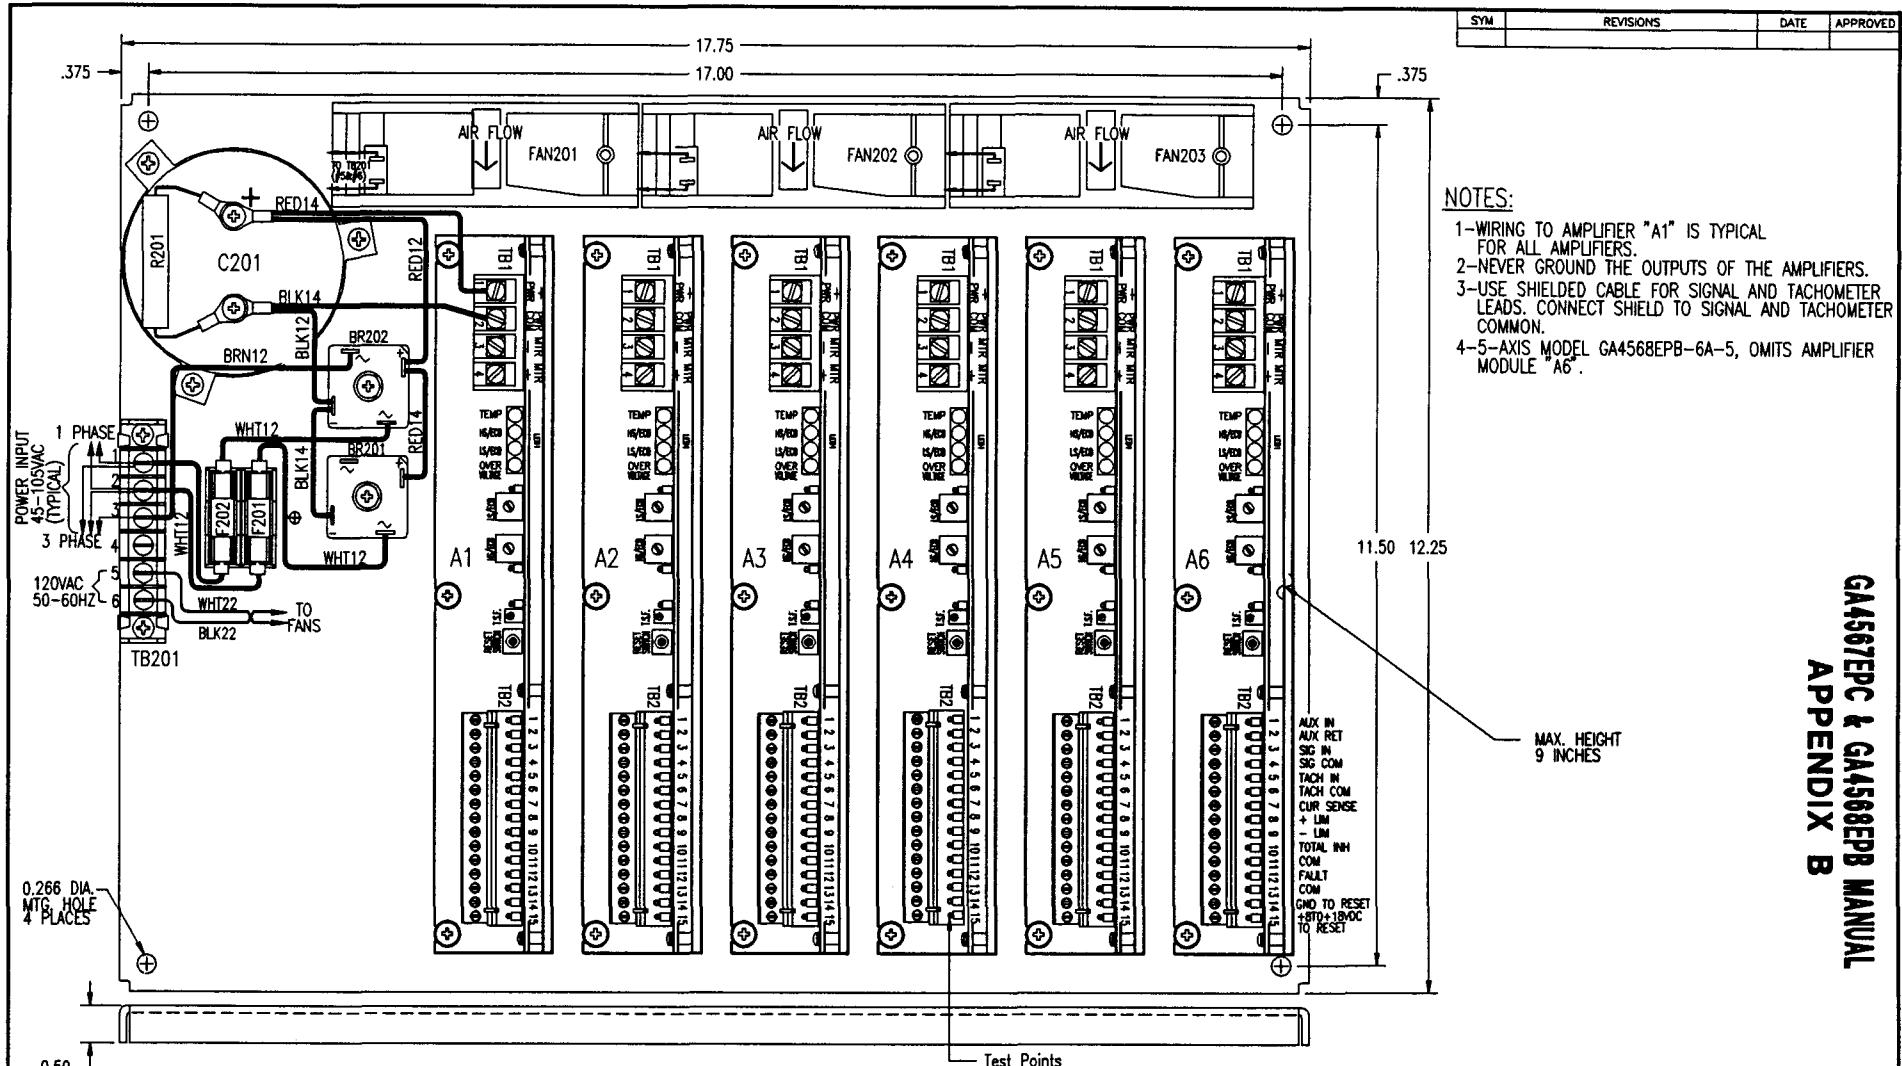

QTY	PART NO.	DESCRIPTION	MATERIAL	ITEM
LIST OF MATERIAL OR PARTS LIST				
3	FAN201-FAN203	FAN, 120VAC, 50-60Hz		8
2	F201-F202	FUSEHOLDER AND FUSE, 20AMP MDA		7
1	R201	RESISTOR, 3K-10W		6
1	C201	CAPACITOR, 8700MFD-150VDC, MAX. SURGE 175VDC		5
1	TB201	TERMINAL STRIP, 6PIN		4
2	BR201-BR202	RECTIFIER 35MB40A		3
5-6	A1-A6	AMPLIFIER MODULE, GA4568EPB-1		2
1	4568-2009	BASEPLATE		1
6-AXIS INSTALLATION DIAGRAM				
MODEL GA4568EPB-6A-6				
FINISH	H.O.O.	DATE 250CT91		
CHK	C.S.V.	SCALE		
APPLC	R.A.D.	N/A		
SHEET 1 OF 1				

**GA4567EPC and GA4568EPB MANUAL**

**APPENDIX C**

**PERSONALITY PREAMP**




**- C1 -**

- C2 -

## VELOCITY MODE PERSONALITY PREAMP

SYM	REVISIONS	DATE	APPROVED
A	RENUMBERED U1	23 OCT 90	R. VASAK
B	REVISED NOTES, ADDED COMPONENT CHANGES FOR GA4569, 71, 76, & 81.	4 NOV 91	

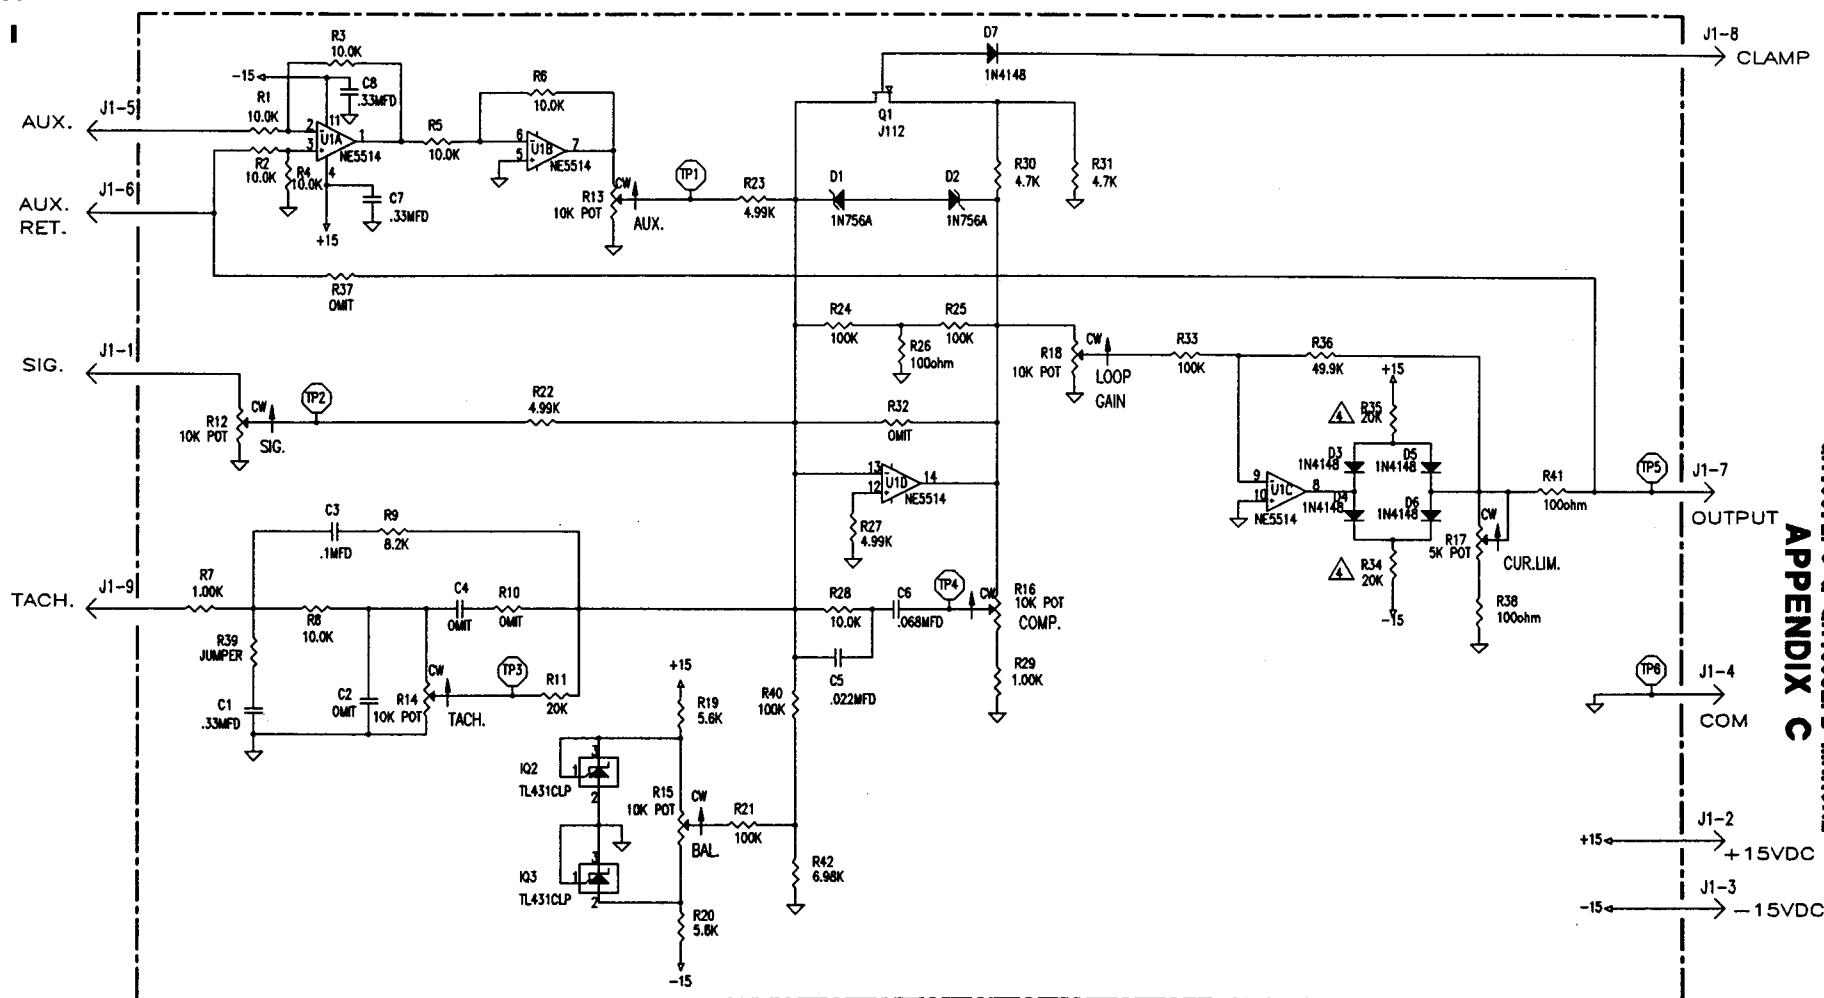

### ENGR. NOTES:

- The GA4597-7 supersedes models GA4597-1 & -6 (Schematics 4597-1000 (A) and -6000 (A)). It incorporates additional balance regulation and can be adjusted to lower current-limit values. Models GA4597-1 and -6 are available on request.
- The component values listed on the Schematic above are for standard compensation.
- For GM2300 series and GM3300 series motors the following compensation values should be used.

LEAD { R9=15K, R10=8.2K, C1=.01, C2=Omit, C3=.033, & C4=.068.

LAG { R28=33K, R29=499ohm, C6=.068.

△ Current Limit resistor values for R34 & R35.

Amplifier Type: R34, R35      Amplifier Type: R34, R35

GA4555P	20K	GA4568EPA	12.1K
GA4562P	6.8K	GA4569EPA	10K
GA4567P, EP	15K	GA4571PR2	4.7K
GA4567PA, EPA, EPB	20K	GA4576PR2	3.9K
GA4568P, EP	8.87K	GA4581PR2	1.5K

- The GA4571, 76, and 81 also requires the following changes: R9=22K, C1 & C5=omit, C6=.22, and CR1 & CR2=1N759. The GA4576 & 81 require R33 to be 49.9K.
- Consult Glentek for component changes to other amplifiers.


GA4567EPC & GA4568EPB MANUAL  
APPENDIX C

LAST USED  
C8      Q1  
D7      R42  
U3      TP6

AW: 4597-7001 (A)  
ASSY. & EPL: 4597-7002 (C)

SCHEMATIC		GLENTEK	
PERSONALITY PREAMP		INCORPORATED	
MODEL GA4597-7		208 SEUNDO, CALIF. 90245	
DRW. H.O.O.	DATE 05 OCT 90	DWG. NO.	REV B
CK. T.Y.C.	SCALE	4597-7000	
APR. M.E.V.	N/A		SHEET 1 OF 1

SYM	REVISIONS	DATE	APPROVED
C	RE-DESIGNED PCB	09MAR92	TY C.

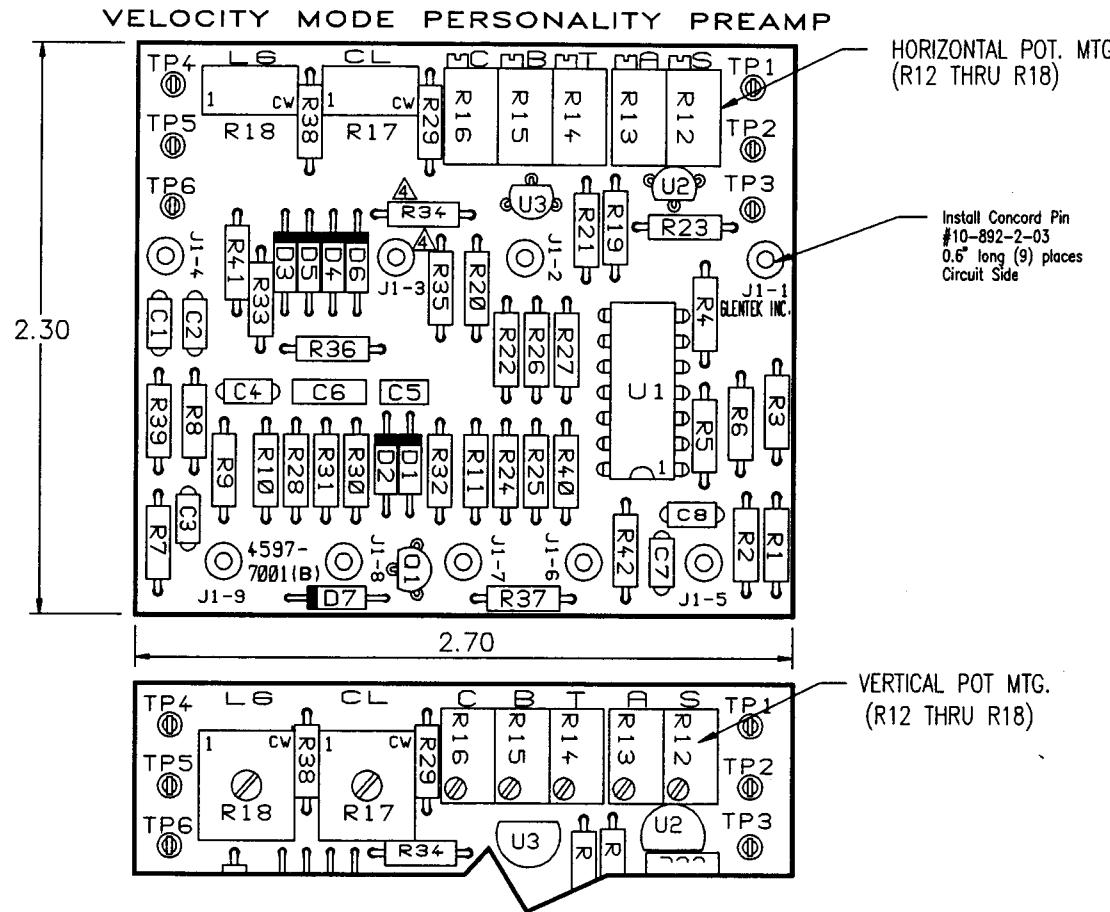

SCHEMATIC: 4597-7000 (D)  
ARTWORK: 4597-7001 (B)

QTY	PART NO.	DESCRIPTION	MATERIAL	ITEM
LIST OF MATERIAL OR PARTS LIST				
2	U2, U3	TL431 CLP (T092 PKG.)		29
1	U1	NE5514 QUAD OP-AMP		28
6	TP1-TP6	TESTPOINT TP103(Component Corp.)		27
3	R10,R32,R37	OMIT		26
1	R42	6.98K 1% 1/4W RN550		25
1	R39	JUMPER		24
1	R36	49.9K 1% 1/4W RN550		23
2	R30,R31	4.7K 5% 1/4W RC07		22
3	R26,R38,R41	100ohm 1% 1/4W RN550		21
3	R22,R23,R27	4.99K 1% 1/4W RN550		20
5	R21,R24,R25 R33,R40	100K 1% 1/4W RN550		19
2	R19,R20	5.6K 5% 1/4W RC07		18
1	R18	10K POT 72XWR10K		17
1	R17	5K POT 72XWR5K		16
5	R12-R16	10K POT VERT. MTG. 68XWR10K OR 10K POT HOR. MTG. 68XWR10K		15
1	R11	20K 1% 1/4W RN550		14
2	R34,R35	SEE NOTE 4		13
1	R9	8.2K 5% 1/4W RC07		12
2	R7,R29	1.00K 1% 1/4W RN550		11
8	R1-R6,R8,R28	10.0K 1% 1/4W RN550		10
1	Q1	J112		9
9	J1-1 TO J1-9	CONCORD PIN #10-892-2-03		8
5	D3-D7	1N4148		7
2	D1,D2	1N756A 8.2V ZENER		6
1	C6	.068MF D CK06(683)		5
1	C5	.022MF D CK06(223)		4
1	C3	.1MF D CK06(104)		3
2	C2,C4	OMIT		2
3	C1,C7,C8	.33MF D CER DIPPED		1
PERSONALITY PREAMP BOARD ASSEMBLY				
MODEL GA4597-7				
FINISH		REV H.O.O. DATE 190CT92 C CNC TY C. SCALE N/A APPR. R.A.D. N/A		
Dwg No. 4597-7002 C SHEET 1 OF 1				

ENGR. NOTES:

- The GA4597-7 supersedes models GA4597-1 & -6 (Schematics 4597-1000 (A) and -6000 (A)). It incorporates additional balance regulation and can be adjusted to lower current-limit values. Models GA4597-1 and -6 are available on request.
- The component values listed on the Schematic above are for standard compensation.
- For GM2300 series and GM3300 series motors the following compensation values should be used.

LEAD { R9=15K, R10=8.2K, C1=.01, C2=0mit, C3=.033, & C4=.068.


LAG { R28=33K, R29=499ohm, C6=.068.

A Current Limit resistor values for R34 & R35.

Amplifier Type:	R34, R35	Amplifier Type:	R34, R35
GA4555P	20K	GA4568EPA	12.1K
GA4562P	6.8K	GA4569EPA	10K
GA4567P, EP	15K	GA4571PR2	4.7K
GA4567PA, EPA, EPB	20K	GA4576PR2	3.9K
GA4568P, EP	8.87K	GA4581PR2	1.5K

- The GA4571, 76, and 81 also requires the following changes: R9=22K, C1 & C5=omit, C6=.22, and CR1 & CR2=1N759. The GA4576 & 81 require R33 to be 49.9K.
- Consult Glentek for component changes to other amplifiers.

## CURRENT-MODE PERSONALITY PREAMP

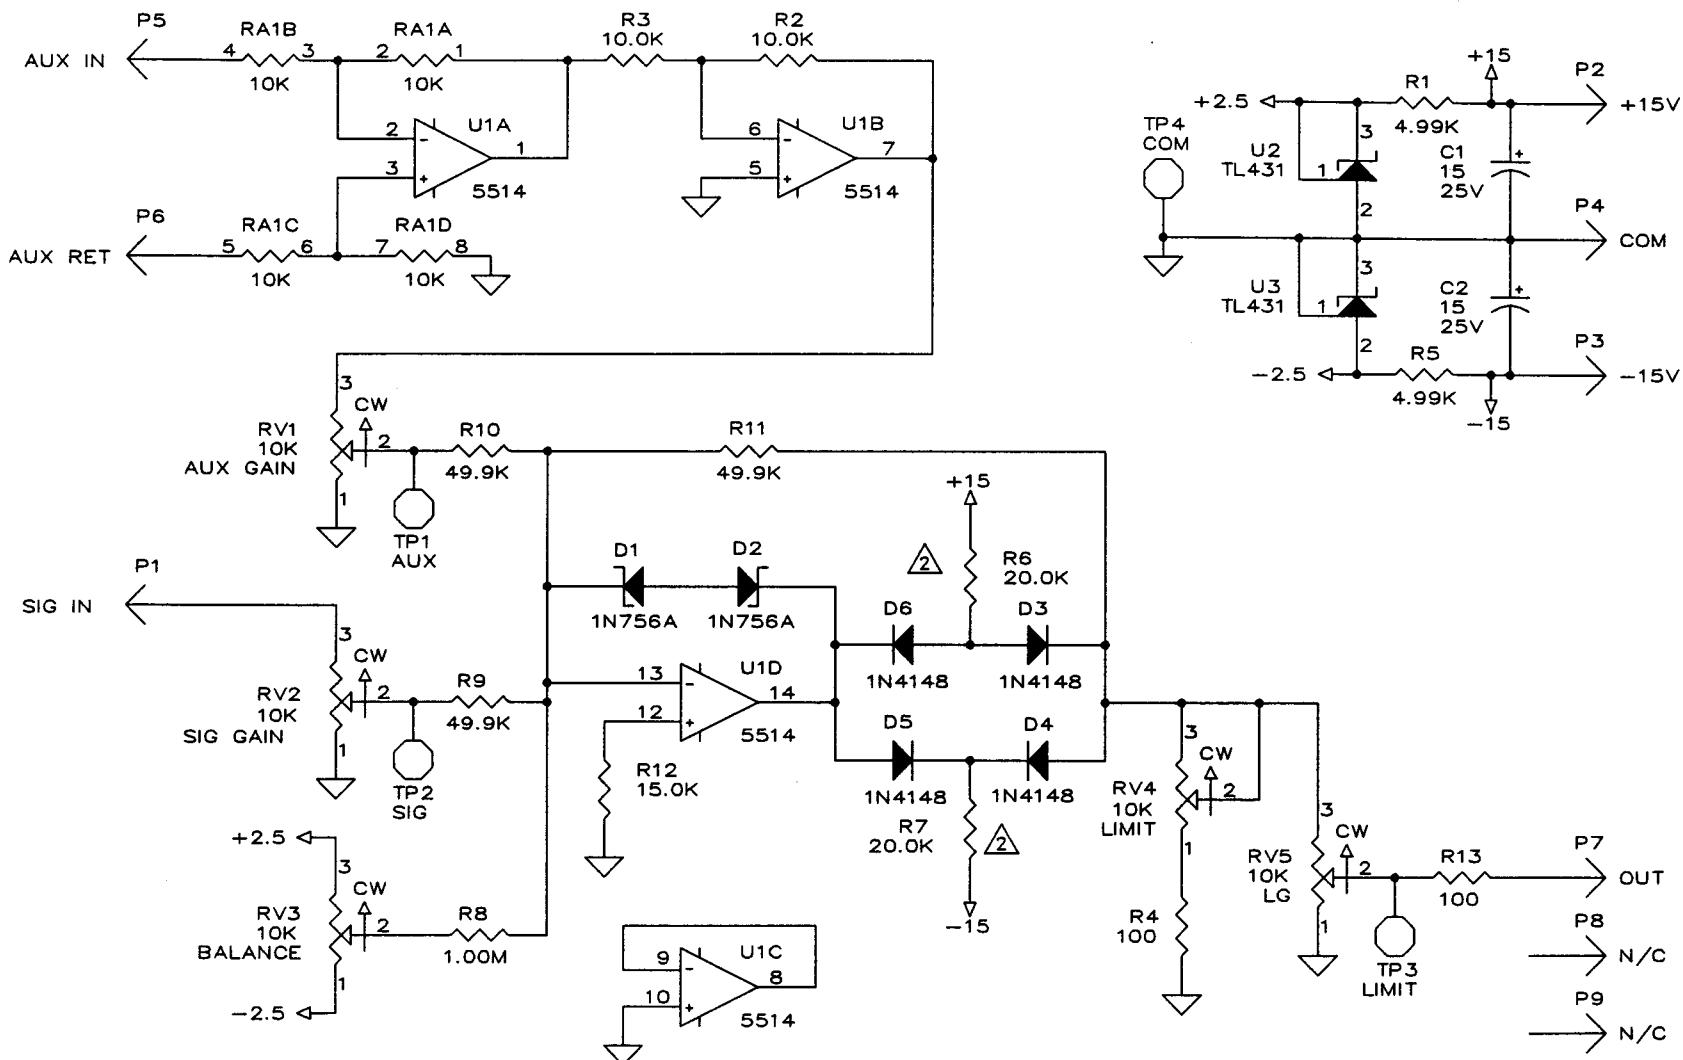

## ENGR. NOTES:

1. The GA4597-51 supersedes model GA4597-5 (Schematic 4597-5000 (A)).  
Model GA4597-5 is available on request.

2. Current Limit resistor values for R6 & R7.

Amplifier Type:	R6, R7	Amplifier Type:	R6, R7	Amplifier Type:	R6, R7
GA4555P	20K	GA4568PA, EPA, EPB	12.1K	GA4585P	10.0K
GA4562P	6.8K	GA4569EPA	10K		
GA4567P, EP	15K	GA4571PR2	4.7K		
GA4567PA, EPA, EPB	20K	GA4576PR2	3.9K		
GA4568P, EP	8.87K	GA4581PR2	1.5K		

3. Resistance is in ohms & capacitance is in uF unless otherwise specified.


SCHEM: 4597-5100 (A)  
PCB: 4597-5101 (A)  
ASSY: 4597-5102 (A)  
EPL: 4597-5103(A)

THIS DWG SUPERSEDES  
4597-5000 REV (-)


SCHEMATIC PERSONALITY PREAMP		GLENTEK	
MODEL	GA4597-51	INCORPORATED	208 STANDARD STREET
DRAWN	H.O.O.	EL SEGUNDO, CALIF. 90245	REV
CHK	T.Y.C.	02NOV93	4597-5110
APP	R.A.D.	SCALE	N/A
		SHEET	1 OF 1

# CURRENT-MODE PERSONALITY PREAMP

## HORIZONTAL ADJUSTMENT

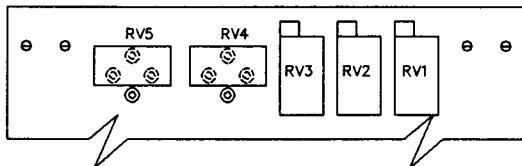

## VERTICAL ADJUSTMENT

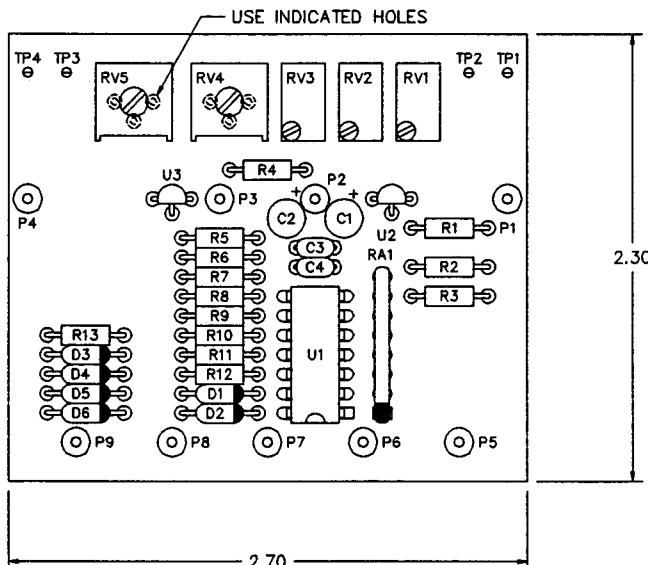

SCHEM: 4597-5100 (A)  
 PCB: 4597-5101 (A)  
 ASSY: 4597-5102 (A)  
 EPL: 4597-5103(A)

### LAST USED

C4 R13  
 D6 TP4  
 RA1 U3  
 RV5 P9

THIS DWG SUPERSEDES  
 4597-5002 REV (A)

QTY	PART NO.	DESCRIPTION	MATERIAL	ITEM
2	U2,U3	TL431		19
1	U1	NE5514		18
1	TP4	TEST POINT, SPCJ-123-03		17
3	TP1-TP3	TEST POINT, SPCJ-123-01		16
1	R12	15.0K 1% 1/4W		15
3	R9-R11	49.9K 1% 1/4W		14
1	R8	1.00M 1% 1/4W		13
2	R6,R7	SEE NOTE 2		12
2	R4,R13	100 1% 1/4W		11
2	R2,R3	10.0K 1% 1/4W		10
2	R1,R5	4.99K 1% 1/4W		9
2	RV4, RV5	10K POT 63XR10K OR 63PR10K		8
3	RV1-RV3	10K POT 68XR10K OR 68WR10K		7
1	RA1	10K 8-PIN 4-RES ARRAY		6
9	P1-P9	PIN, CONCORD 10-892-2-03		5
4	D3-D6	1N4148		4
2	D2,D1	1N756A		3
2	C3,C4	.33uF DIPPED CERAMIC		2
2	C1,C2	15uF 25V DIPPED TANTALUM		1

### LIST OF MATERIAL OR PARTS LIST

UNLESS OTHERWISE SPECIFIED		BOARD ASSEMBLY	GLENTEK	
TOLERANCE PROJECTION: ±1/64 ANGLE: ±2° DECIMAL: ±.005		PERSONALITY PREAMP	INCORPORATED	
BEND RAD: MINIMUM BREAK SHARP EDGES: .005-.010		MODEL GA4597-51	208 STANDARD STREET	EL SEGUNDO, CALIF. 90245
FINISH			DATE 02NOV93	REV -
	H.O.O.		DRG NO. 4597-5112	
	CHK TY C.	SCALE FULL	APPR. M.E.V.	SHEET 1 OF 1

### ENGR. NOTES:

1. The GA4597-51 supersedes model GA4597-5 (Schematic 4597-5000 (A)). Model GA4597-5 is available on request.

2. Current Limit resistor values for R6 & R7.

Amplifier Type:	R6, R7	Amplifier Type:	R6, R7	Amplifier Type:	R6, R7
GA4555P	20K	GA4568PA, EPA, EPB	12.1K	GA4585P	10.0K
GA4562P	6.8K	GA4569EPA	10K		
GA4567P, EP	15K	GA4571PR2	4.7K		
GA4567PA, EPA, EPB	20K	GA4576PR2	3.9K		
GA4568P, EP	8.87K	GA4581PR2	1.5K		

3. Resistance is in ohms & capacitance is in uF unless otherwise specified.